

SHARPER IMAGE®

9" PORTABLE DVD AND TABLET COMBO

Item No. 206886

User Guide

 


Thank you for purchasing the Sharper Image 9" Portable DVD and Tablet Combo. Please take a moment to read this guide and store it for future reference.

FEATURES

- 9" high resolution digital panel
- Built-in rechargeable Lithium ion battery
- Two built-in speakers
- Supports playback DVD/VCD/CD/MP3
- Supports Android™ 9.0 GO, Quad core, Arm Cortex-A35 @1.3GHz, Wi-Fi: 802.11b/g/n
- Built-in internal memory of 16GB
- Supports wireless connection [tablet mode]
- Touch control functions
- Features a stand on the back of the device for hands-free use
- Includes a USB cable, AC wall adapter, car adapter and strap

IDENTIFICATION OF PARTS

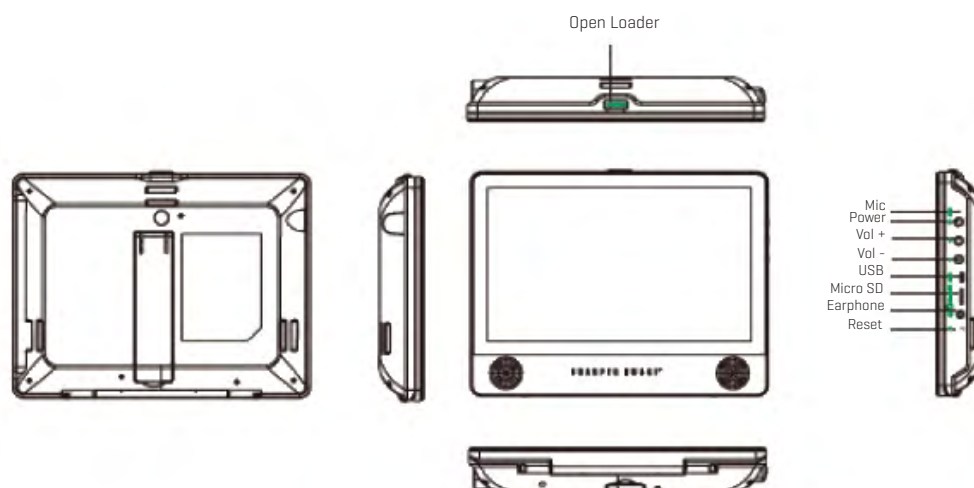

HOW TO USE

VOLUME — +

- Press — + to adjust volume

POWER BUTTON

Open the device and long press  for 2-3 seconds. The screen will light up and pictures will show up on the interface page.

SHUT DOWN/REBOOT/AIRPLANE MODE

Long press . It will ask if you want to turn the power off/reboot/airplane mode. Press OK to shut down. While charging, if the device is off, press  to view the charging status.

STANDBY MODE

In boot mode, when tapping , the system will go into standby mode to save power. Tap  again to go back and light up the screen for further use.

OPEN LOADER ◀

Pull down ◀ to open the loader and to remove or insert the disc.

LOCK AND UNLOCK THE SCREEN

LOCK: You can set up sleep time in Settings by choosing Display. The system will enter sleep mode automatically and lock the screen in standby mode.

UNLOCK: Pull down 🔒 and drag 🔓 to unlock the screen and enter the application interface.

CONNECTIONS

EARPHONE JACK: To connect external earphone.

 
MICRO USB JACK: For both power supply input and PC connectivity [additional cables for connecting to your PC are not included.]

TF CARD SLOT: Also known as Micro SD.

RESET: To restart the system, use a thin object [like a paper clip] to press RESET, located on the right side of the device. The device will reset, shutting down all power. Press and hold for 2-3 seconds to restart.

MIC: For recording purposes.

HOME PAGE INFORMATION COLUMN

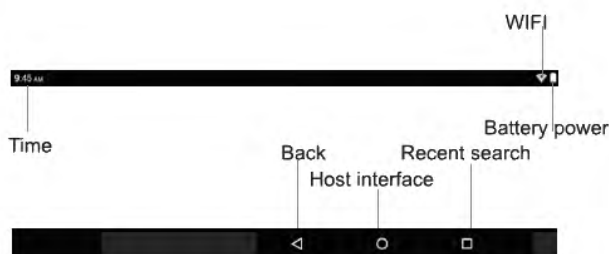

TEXT INPUT

 
When using the tablet, you can use the virtual keyboard to enter text, numbers, and symbols directly by touching the screen. After selecting the Android input method, the default keyboard will show the following:



- Press ?123 to input numbers and letters and change letters to uppercase or lowercase by pressing ↵


MIRROR CAST CONNECTION:

1. This unit can only be used to output signal to external device.
2. Make sure both the unit and the external device is connected to the same Wi-Fi or hotspot.
3. Turn Mirror Cast on from the external device.
4. Mirror Cast connection setting for this unit is as below: Settings -->Connected devices--> Connection preferences-->Cast -->Tap the icon [] on right corner to Enable wireless display--> You can find the external device name-->Click the external device name--> The external device will show connection info “DECLINE” or “ACCEPT”-->Click “ACCEPT” to connect.

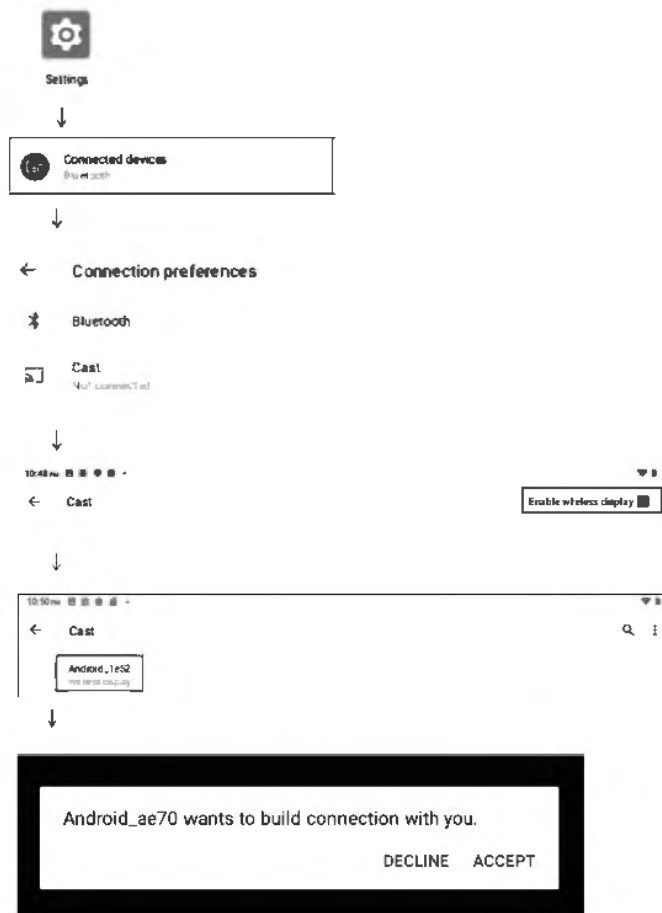


DVD PLAY MODE

 - Press the icon  in the application list to enter DVD play mode
- Press the open button  to remove your DVD. After the disc is loaded it will play
- Touchscreen buttons will appear below:

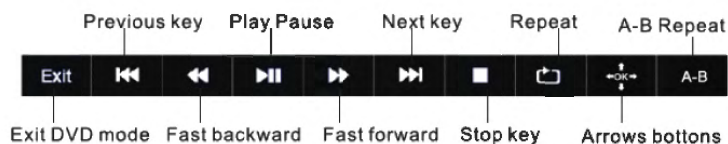

 - Move the icon column further to the left, you will find 5 more icons as follows:

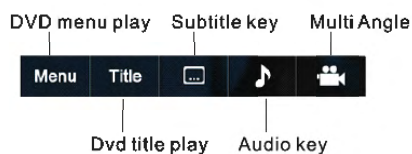

An arrow control board will be displayed on the screen. You can use it to select any item in the DVD menu and play [see diagram below for reference].



When playing DVDs, this display screen will show [this feature varies per disc]:



Select a "TITLE: or "CHAPTER to play [see diagram below for reference].



 
RECHARGEABLE BATTERY USE

- This device utilizes long-life Lithium-ion battery for portable power supply
- The battery has no memory effect and can be recharged safely regardless whether it's fully or partially discharged
- Do not charge longer than 5 hours each time
- A fully recharged battery can last up to 2.5 hours for DVD play and up to 4 hours for internet surfing [when system brightness and volume are set at medium]
- Press the power button to see the charging status while the device is connected and charging

NOTE:

- As soon as low power is indicated on the screen while operating, recharge the battery immediately to avoid the inconvenience of a sudden shutdown
- The normal working temperature is: 0°F - 140°F
- Always unplug the AC adapter/DC adapter from the device when not in use
- The device will get warm when used continuously. This is normal. Avoid leaving the device unattended for long periods of time
- Avoid collisions and keep away from excessive heat

SAFETY PRECAUTION

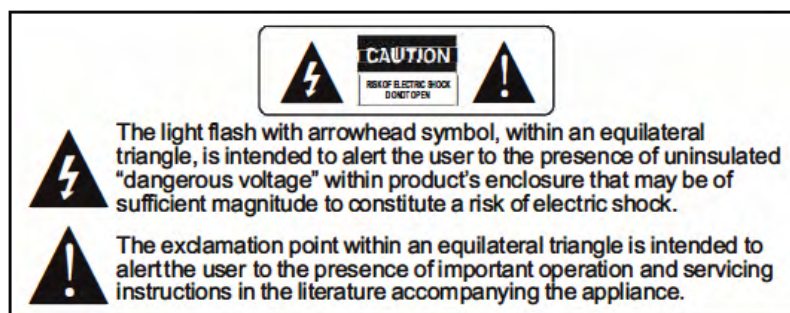

Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

1. Please read the instruction manual carefully and follow all the requirements of safe operation to operate the device.
2. Do not use or leave the device in direct sunlight or a hot environment such as a vehicle etc. that is in hot environment. Overheating can damage the device.
3. Do not overcharge the device. Do not leave the device on the charger for very long after the battery has been fully charged.
4. Do not drop the device.

5. Only use the factory supplied charger. The use of unapproved charger or cable may cause the battery to fail, explode and/or damage the device.
6. Do not disassemble, puncture, crush or expose your device to temperatures above 40°C / 104°F.
7. Keep the device away from fire or water.
8. Keep the device from moisture and extreme temperatures.
9. Should the battery swell or expand, please immediately discontinue use of your device. It's possible the device has overheated or overcharged. Contact Sharper Image Customer Service for assistance.
10. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus [including amplifiers] that produce heat.
11. Unplug this unit during lightning storms or when unused for a long time.
12. When cleaning, unplug the system. Use only wet cloth to clean. Do not use liquid detergent or aerosol.
13. Refer all servicing to qualified service personnel, servicing is required when the unit has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, exposed to moisture, does not operate normally. Don't try to repair the machine by yourself because of the danger of high voltage and electric shock.
14. Do not use irregular shaped discs such as heart or star-shaped discs as they may cause the unit to malfunction. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: [1] This device may not cause harmful interference, and [2] This device must accept any interference received, including interference that may cause undesired operation.
 - **Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
 - **NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

SPECIFICATIONS

Dimensions [inches]	8.8 x 6.7 x 1.3
Weight	Approximately 1.7 lbs.
LCD	9 " 1024 * 600
OS	Android 9.0 GO
Processor	1.3G Hz Quad-Core
Memory	1GB DDR RAM, 16GB internal
Wi-Fi	802.11 b/g/n
Disc support	DVD/VCD/CD/MP3
Connections	Micro-USB, Micro-SD (up to 32GB), Earphone Jack
Battery	3.7V 3600mAh Li-ion
Run time	2.5 hours with DVD 4 hours with Wi-Fi
Operating temperature	Between 32°F and 104° F



If at any time in the future you should need to dispose of this product please note that waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. [Waste Electrical and Electronic equipment Directive]

- Due to continuous improvement, no prior notice will be given regarding changes on above features and specifications
- Google, Android, Google Play and other marks are trademarks of Google LLC

WARRANTY AND CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

[Click here to read more....](#)

SHARPER IMAGE

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.