

SHARPER IMAGE®

ULTIMATE HEATED HAND COZY

Item No. 206949

User Guide



Thank you for purchasing the Sharper Image Ultimate Heated Hand Cozy. Please take a moment to read this guide and store it for future reference.

FEATURES

- Adjustable temperature control [5-Minute Pre-Heat, High, Medium and Low]
- Operates on 3 rechargeable lithium-ion batteries [2600mAh single cell batteries]
- Includes an AC adapter and battery pouch

HOW TO USE

- Plug the AC adapter into an outlet.
- Connect all 3 batteries to the battery pouch and then connect the pouch into the AC adaptor until it is fully charged. The AC adaptor will illuminate green when fully charged. While charging, the light will illuminate red.

Note: *Do not force the plug into the battery.*

- Fully charge the Heated Hand Cozy battery before using for the first time. Failure to fully charge the battery prior to the first use may reduce battery life.
- When fully charged, disconnect the battery pouch from the AC adapter.
- Locate the input plugs inside the small pouch in the hand cozy and connect the charged battery. Place the battery into the pouch once connected.
- Press and hold the control button in the hand cozy for three to five seconds or until the LED light flashes red [5-Minute Pre-Heat], then press again to cycle through heat levels.

Note: *After approximately five minutes the light will change to solid white, indicating the glove is no longer in pre-heat mode. The temperature can be adjusted by pressing the control button.*

TEMPERATURE SETTINGS

- Red- High heat: Average 113° F with approximate run time of 5.1 hours
- White- Medium heat: Average 98° F with approximate run time of 7.8 hours
- Blue- Low heat: Average 93° F with approximate run time of 15.5 hours

Note: *Run times were tested under an average room temperature of 82.4° F.*

- To turn off the hand cozy press and hold the control button for three to five seconds or until the LED light turns off.
- Unplug the battery when the hand cozy is not in use. Store battery inside the pouch of the hand cozy when temporarily not in use.

Note: *The Ultimate Heated Hand Cozy should only be used with the included battery and charging cable.*

CLEANING AND MAINTENANCE

- Always remove battery from the hand cozy before cleaning.
- Spot clean with a damp cloth, hand wash in cold water with mild detergent or machine wash gently in cold water.
- Do not twist the garment as this can damage the cable.
- Do not dry clean or bleach.
- Do not tumble dry.

BATTERY USE AND CARE

- Do not use the battery if you notice a change of shape (lumps), overheating when charging, rust or corrosion on the battery connectors.
- Charge the battery regularly (recommended a minimum of once every 3 months).
- Charge between each use.
- The battery life is 300+ cycles before the battery will diminish in capacity output.
- The lithium-ion battery provides a diminished capacity output at extreme cold temperatures. Keep the battery away from cold to minimize the impact.
- For best performance, it is recommended not to fully charge the batteries if the product is not being used for a longer period of time. Charge for 30 minutes only and after 3 months charge the batteries again for about 30 minutes. Charge the batteries completely before using product again.
- When battery is not in use, keep it away from other metal objects like paper clips, coins, nails, screws or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- Under abusive conditions, liquid may be ejected from the battery: avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, seek medical help. Liquid ejected from the battery may cause irritation or burns.

GENERAL PRODUCT SAFETY WARNINGS

Read all safety warnings and instructions. Failure to follow warnings and instructions may result in electrical shock and/or serious injury. Save all warnings and instructions for future reference.

SAFETY WARNINGS

- Do not expose product to rain. Water will increase the risk of electrical shock.
- Do not use the cord for carrying, pulling or unplugging the heated product. Keep the cord clear from heat, oil, sharp edges or moving parts.
- Do not use on open wounds, sensitive skin areas or in the presence of poor circulation. Check skin frequently during use to ensure rashes or burns are not developing. The FDA and CPSC recommend the following precautions be taken to avoid hazards associated with the use of heated clothing.

ALWAYS

- Inspect heating unit before each use to assure it is in proper working order.
- Discard if it looks worn or cracked, or if the electrical cord is frayed.
- Read and follow all instructions prior to use.

NEVER

- Use on an infant.
- Use on a person who is paralyzed or has skin that is not sensitive to temperature changes.
- Use on a sleeping or unconscious person.
- Use in an oxygen enriched environment or near equipment that stores or emits oxygen.
- Sit on this device.
- Crush this device.
- Unplug this device by pulling its connecting cord.
- Use pins or other metallic fasteners to hold this device in place.
- Do not submerge product or battery into water while in use.
- Do not cut, puncture or tear into the lining of the product.
- Do not allow the battery to come into contact with water or other liquids. If water or liquids enter the battery interior, immediately disconnect the product from the battery. Allow the battery to dry completely before use.
- Do not penetrate, strike, short-circuit or disassemble battery.
- Keep all electronic components of your product away from fire and extensive heat.
- Do not leave product unattended while connected to the battery.
- Only use the AC adapter and battery included with this product.
- If you experience any discomfort while using this product, remove it immediately and consult your physician before resuming use.
- Check with your physician if you are pregnant, have heart disease, a pacemaker, diabetes, circulatory problems, sensitivity to heat, or are under 13 years of age.

GENERAL PRODUCT SAFETY WARNINGS

Read all safety warnings and instructions. Failure to follow warnings and instructions may result in electrical shock and/or serious injury. Save all warnings and instructions for future reference.

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.