

明説用動与用 | JX | MeTne d

www.joyoaudio.com



A Safety instructions

Thank you for purchasing our products!

Important safety instructions



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the



This symbol is intended to alert the user--- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

User instructions: After you turn on the banTamP xL, the tube warms up for the first 20-30 seconds, the unstable sound during this period is normal.

Detailed safety instructions

- For your safety and let you be familiar with this product, please read all the safety and operation instructions before use.
- Please keep this user manual for future use and maintenance.
- Please follow all the safety instructions on the product or in the user manual. • Use the attached power adapter only. If use other power adapter, it will damage the internal circuits or
- Keep it away from children!
- Please install this product according to manufacturer's instructions. Put it in places that have good ventilation and heat dissipation. Don't block any ventilation openings nor cover it with cloth and the like.
- Don't use it near water or damp areas, don't drop water or other liquid substance into this product;
- Don't use it near heat sources, such as heater, electrothermal oven, high power amplifier and more.
- Don't put hazardous chemicals on the product, inflammable and explosive substances such as alcohol,
- Do not use alcohol or other cleaning fluids to clean this product, otherwise it will damage the surface, use a
- Don't damage the power cord or plug. Don't pull the power cord and other parts. Please unplug it if you need to move this product.
- Please turn off the power switch and unplug the AC power socket during thunderstorm, lightning or if it is not
- in use for a long time. • Should any of the following occur, please switch it off and unplug it and contact your local distributor or have
- it repaired by qualified personnel. 1) Metal or other solid object or liquid falls into the cabinet, or gets caught in the rain. 2) The power cord or power plug were damaged, cable core are exposed or wire break.

3) The product is in smoke, peculiar smell or other abnormal condition. 4) The product falls on the ground or malfunctions.

Panel instruction



 $1 \quad 2 \quad 3 \quad 4 \quad 5$

Front panel

1.Head's Model. 2.Guitar Input. 3.Channel Switch: for choosing the channel **4.Bluetooth Switch:** for turning on/off banTamP xL's Bluetooth function. 5.Gain Knob: adjust the Gain.

6.Tone Knob: adjust the tone brightness. **7.Volume Knob:** adjust the volume. **8.Power/Bluetooth indicator:** turn on banTamP xL, the indicator becomes red, then turn on Bluetooth switch, the indicator changes from red to blue. **9.Power Switch:** turn on/off banTamP xL.

$12 \quad 13$ Rear panel

10.Bluetooth Antenna

11.Power Interface: connects to DC 18V/2.0A power adapter for power supply, make sure to use the attached power adapter. 12.Speaker Output: please connect with speaker impedance that is 8Ω or more than 8Ω ! Important notes: when connected with speaker impedance that is more than 8Ω , banTamP xL's power will be reduced. 13. Channel-switching Footswitch pedal's Jack **14.Headphone Output:** the amp becomes mute when it connects to headphones.

15.FX LOOP: connects effect pedal input to banTamP xL's SEND Jack, and connects effect pedal output to banTamP xL's RETURN Jack.

Connection

Specifications:

Power adapter: INPUT AC 100-240V 50/60Hz OUTPUT DC18V/2.0A Rated power:20W/8 \Omega Speaker Impedance: 8Ω Bluetooth version:4.0 **Headphone impedance:** Standard 32Ω Minimum 16Ω **Dimension:** $163 \text{mm} \times 110 \text{mm} \times 140 \text{mm}$ Weight:1300g

Package content:

banTamP xL x1 Power adapter x1 Owner's manual x1 Power cablex1 Channel-switching Footswitch Connecting Cable×1 Channel-switching Footswitch pedal x1 Speaker cable x1

> JOYO TECHNOLOGY CO., LTD Address: 2/F, Lushi Industry Building, 28th District, Bao'an, Shenzhen, 518101 China. www.joyo-amps.com Email:info@joyoaudio.com Tel: 0086-755-29765381 JOYO Technology is committed to guarantee the highest quality standards. All Technical

Guitar Effectracion bepictures are only for your information, subject to the actual products.

Bluetooth connection 1 Turn on the Bluetooth slide switch. 2 Its power indicator changes from red to blue. 3 Switch on the Bluetooth of your equipment, wait for it to locate banTamP xL. Please note that the names located a re according to different models you have bought, the names are on the upper side of banTamP xL's input jack as shown in the picture, for example, "JACKMAN II" 4 Click the related device and match. Cabinet impedance matching The matched speaker impedance is 8Ω , of course, 16Ω works too, but banTamP xL achieves maximum power output only when speaker impedance is 8Ω . While with 16Ω , banTamP xL's power reduces. Please don't connect with speaker impedance that is

详细的安全说明 感谢您购买我们的产品! ● 为了您的安全和能更快地熟练使用本产品,使用前请先详细阅读并理解本书中所有的安全与使用说明。 重要的安全说明 ● 为了您以后能更加方便地使用和保养本产品,请妥善保管好本使用说明书以供必要时查阅。 ● 为了您能更加安全地使用本产品, 请遵守在设备上和说明书中所有的警告与注意事项。 ● 只能使用本机提供的电源适配器,若使用其它规格的电源适配器,可能会损坏本机或产生噪音。 ● 请将本产品收藏于儿童不宜获得的地方! 请不要将本产品拿给儿童玩耍! 注意: 机内无用户可用备件! 为了防止触电, 切勿自行拆开机盖! 必要时需由专业人士维修! ● 请查阅并按照制造厂商的方法来安装本机器,请置它在易通风散热的地方。请勿阻塞机器上所有的通风散热 孔。不要用物品覆盖着本机器; 警告: 为防止发生火灾或触电危险, 本机切勿受雨淋或受潮! ●禁止在靠近水或潮湿的地方使用本机器,禁止将水或其它液体之类的东西滴入或倒入机内; 等边三角形中带有的闪电型箭头, 该符号用来告诫用户---机内具有危险电压的非绝缘部分, 易造 等辺二用形甲市 成电击的危险。 ●不要在靠近热源的地方使用本机器,如加热器、暖气机、电热炉、大功率放大器等各种易发热设备。 ● 请勿将易发生危险的物品放置在机器上。易燃易爆如酒精、天那水之类的医疗及化学用品等等。 等边三角形中带有的感叹号, 该符号用来提醒用户---机器附件中有重要的操作和保养说明, 请查 等边三角形中带 阅使用说明书。 ● 请勿用化学溶剂如酒精之类的物品清洁本机器, 否则会对机器表面造成损伤, 必要时请用清洁的干布擦拭。 ● 应避免电源线及插头受到损伤或损坏。不要强行拉扯电源线及其它组件, 若要移动本装置请拔下电源插头。 ● 当打雷或闪电、或较长时间不使用本机器,请立即关闭本机的电源并拔出交流电源插头。 该符号警告用户——禁止推移在最顶端装放有机器而又无保护措施的可移动机架,谨防最顶端的机器跌落给您带来不必要的人身伤害。为保护您的利益,请使用由该制造厂商所生产或推荐的可 ● 若发生以下异常情况时, 请立即关闭本机的电源并拔下电源插头, 并与当地经销商联系或由专业人士维修。 移动机架、三角架、脚架,固定架、控制台等配件。 1) 金属之类或其它异物跌落入机器内; 水或其它液体进入机器内; 或被雨淋后。 2) 当电源线或电源插头受到损伤, 如线芯露出或断线。

3) 机器冒烟、有异味或出现其它异常情况时。

4) 机器跌落在地上后或工作不正常等情况时。





▲ 安全提示

用户须知:在刚开机20-30秒前为电子管预热,期间的声音不稳定属正常情况。

JACKMAN II 金色 中英文尺寸160*125mm 12页 材质105g铜板纸 齐马钉(环保)

Guitar Amps Accessories