


## Installing and Charging the Batteries



- 1 Loosen the 2 screws on the back cover of the radio using the tab located at the bottom of the belt clip.

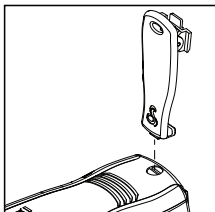


- 2 Insert the 5 AAA NiMH rechargeable batteries into the radio according to the polarity marks in the slots (+ & -).

**Note:** Be sure that the included batteries are fully charged.

Regular alkaline batteries may also be used. **Do not** attempt to charge alkaline/non-rechargeable batteries.

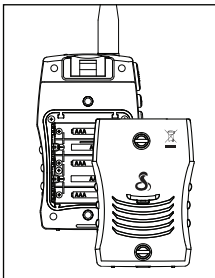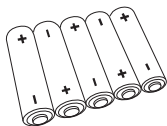


- 3 Plug charger into the radio.


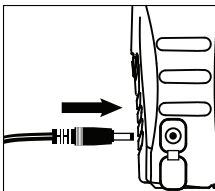


## Attaching the Belt Clip and Wrist Strap


- 1 Attach the belt clip to the radio.

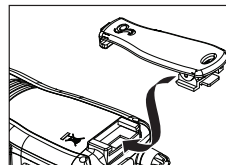

- 2 Press open the belt clip, slide it over the belt and release the clip.

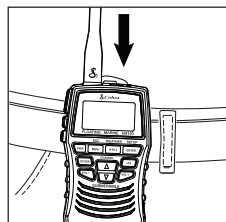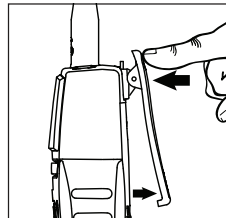

- 3 Thread wrist strap through the tab located at the top of the belt clip.

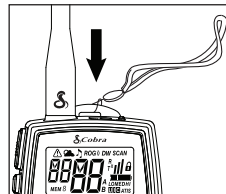

**Cobra**  
MARINE®



QUICK START GUIDE

# THANK YOU!

## For purchasing the Cobra MRHH150FLT

A floating, compact full-featured VHF radio.

Full manual available at: [www.cobra.com](http://www.cobra.com)




Cobra® and the snake design are registered trademarks of Cobra Electronics Corporation, USA.  
Cobra Electronics Corporation™ is a trademark of Cobra Electronics Corporation, USA.  
Other trademarks and trade names are those of their respective owners.


## Cobra MRHH150FLT Features

- **3 Watt VHF -**  
Low/Med/Hi Adjustable  
Power Settings and Automatic  
Power-Save Mode
- **Floating -**  
Never lose your radio
- **Submersible -**  
to IPX7 Standard

## Radio Controls

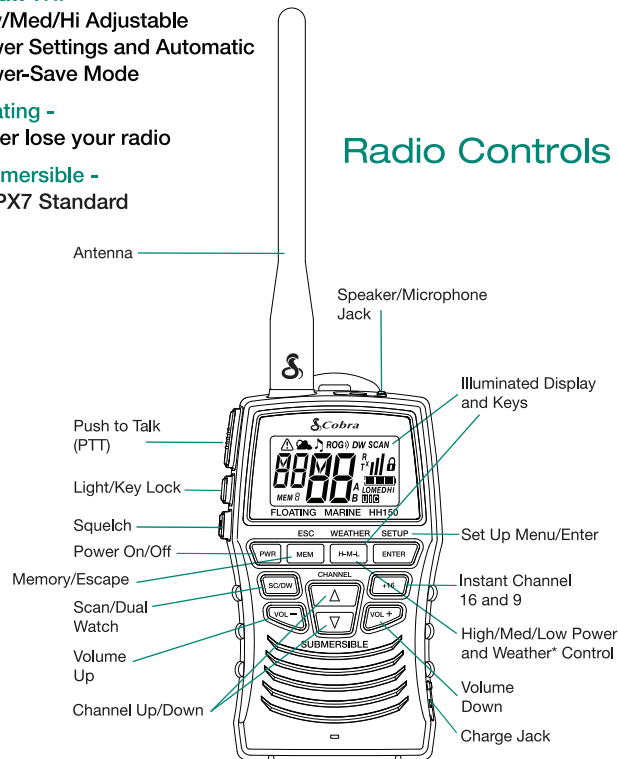

## Radio Display Icons

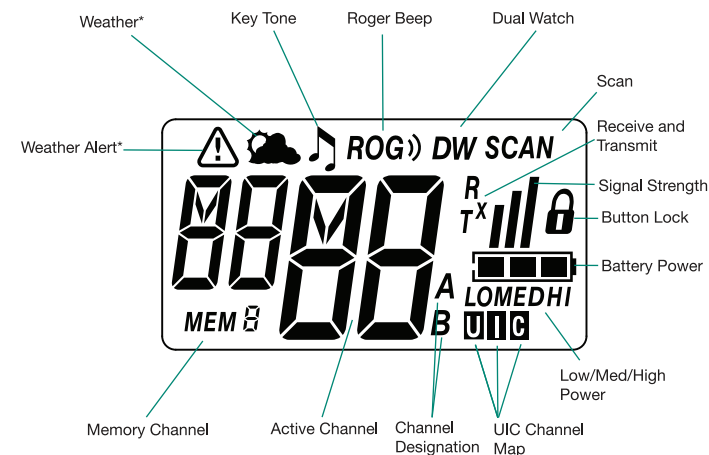

\* Weather and Weather Alert are available on U.S. version only.

\* Weather and Weather Alert are available on U.S. version only.