

ELECTRIC FIREPLACE

SPARTA 26 EUREKA 26

Model# : FB-SPA26, FB-ERK26

OWNER'S MANUAL.



SPARTA 26
Flat glass electric fireplace



EUREKA 26
Curved Glass Electric fireplace





TABLE OF CONTENTS

Product Dimentions	2 - 3
Important Instructions	4 - 5
Recessed Instalation	6 - 8
Instalation Into Mantel	9 - 10
Operation	11 - 12
Temperature Limiting Control	13
Remote Control Battery Information	13
Troubleshooting	14
Care and Maintenance	15
Customer Support	16

PRODUCT DIMENTIONS

SPARTA 26





FB-SPA26

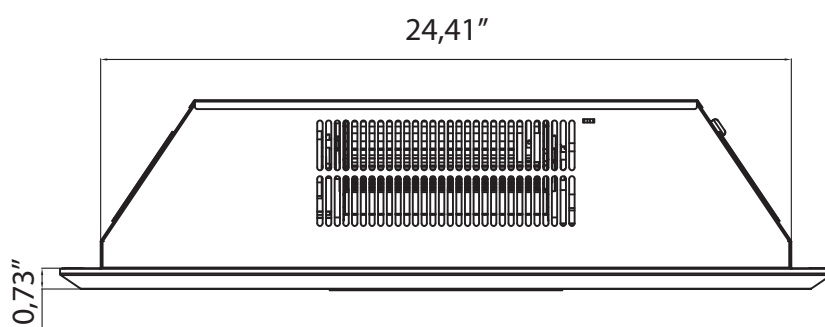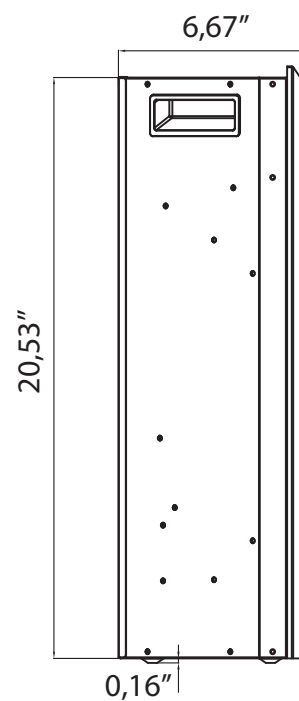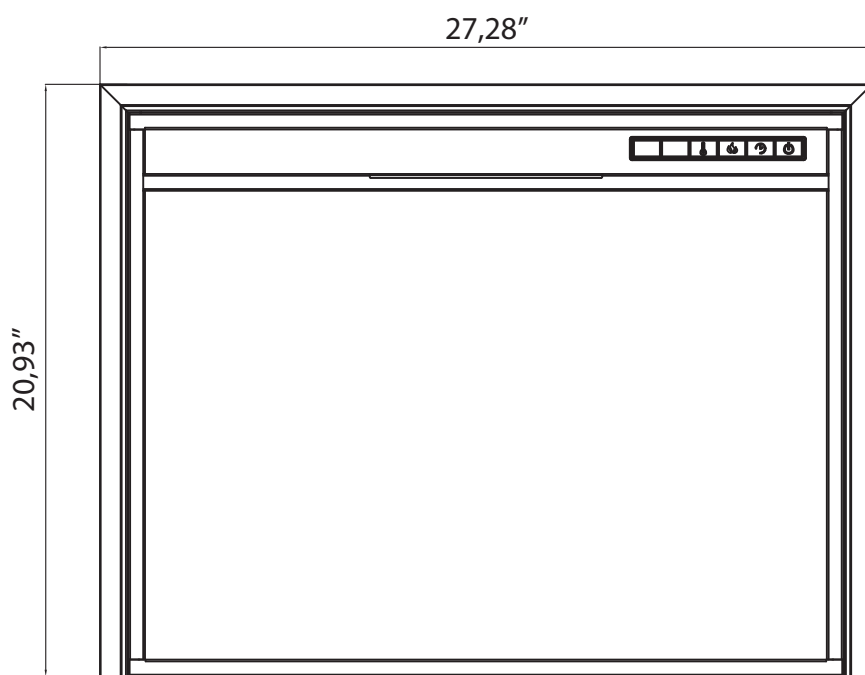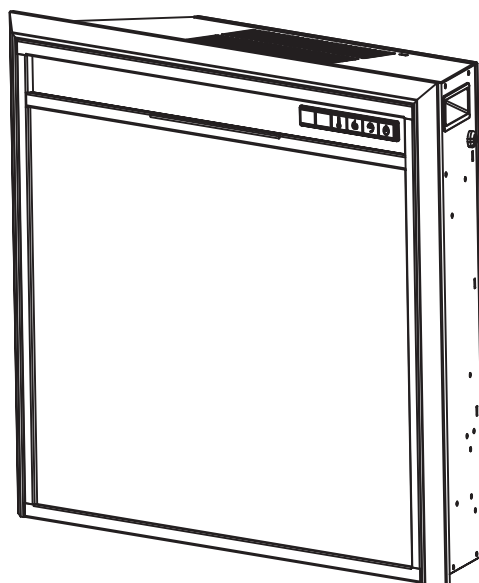

PRODUCT DIMENTIONS

EUREKA 26

FB-ERK26

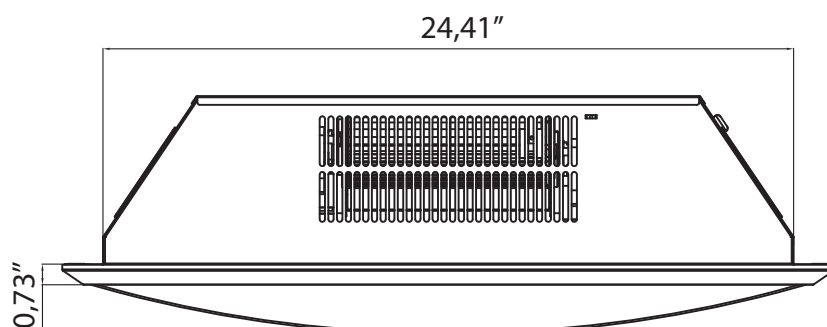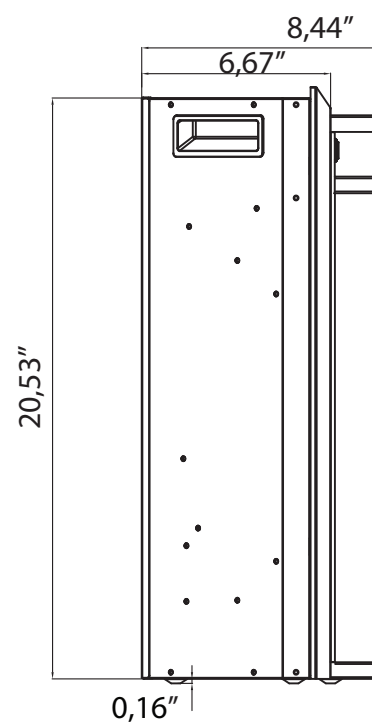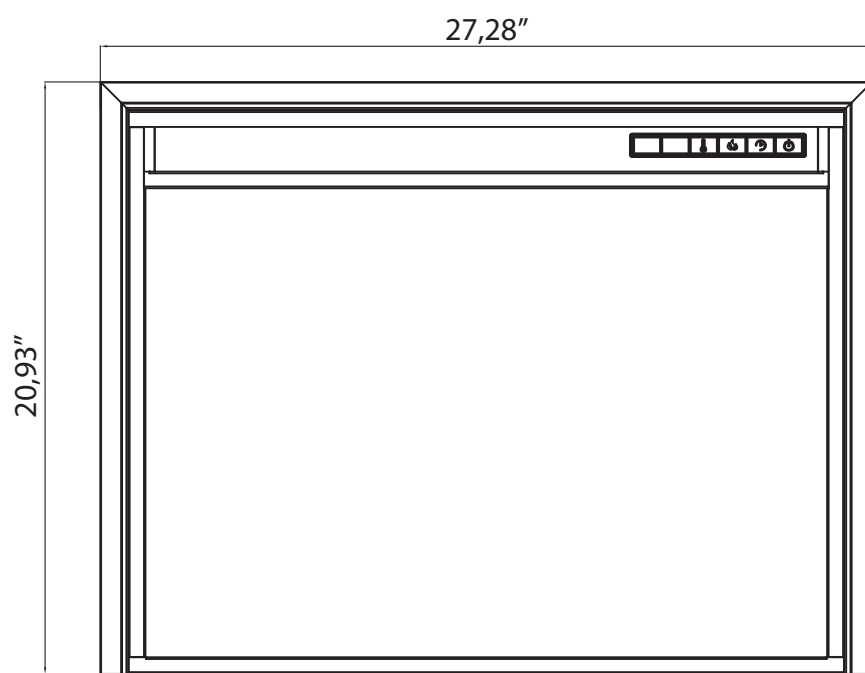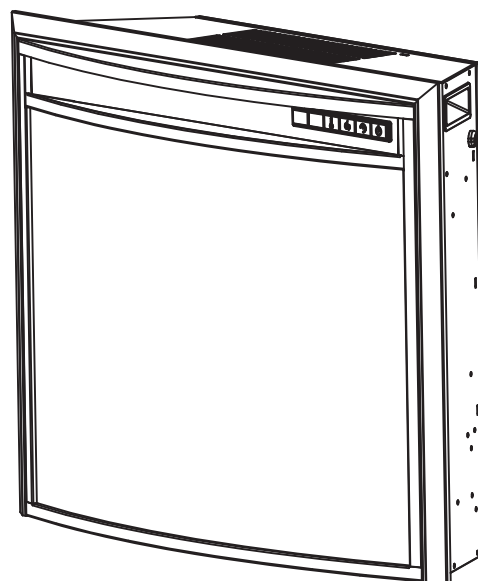

IMPORTANT INSTRUCTIONS



WARNING

Please read all of the information in this operating manual, including all safety, operating, and maintenance information. When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using this fireplace.
- Do not use this fireplace outdoors.
- This fireplace is not intended for use in bathrooms, laundry areas or similar indoor locations. Never position the fireplace where it may fall into a bathtub or other water container.
- Do not run the power cord under carpeting. Do not cover the power cord with throw rugs, runners, or the like. Do not route cord under furniture or appliances. Arrange the power cord away from high traffic areas or where it may be tripped over.
- To disconnect heater, turn controls to off, and turn off power to heater circuit at main disconnect panel.
- Connect to properly grounded outlets only. Always plug fireplaces directly into a wall outlet/receptacle. Never use with an extension cord or reloadable power tap (outlet/power strip).
- To prevent a possible fire, do not block the fireplace's air intakes or the exhaust in any manner. Do not operate the fireplace on soft surfaces such as a bed where the openings may become blocked.

There is a thermostat protective device inside the fireplace. When the inner temperature exceeds a predefined level or abnormal heating occurs, the thermostat protective device cuts off the power supply to avoid damage to the fireplace or risk of fire.

Use this fireplace only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electrical shock, or injury.



WARNING

This fireplace is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this fireplace. Keep combustible material, such as furniture, pillows, bedding, paper, clothes and curtains at least 3 feet. (0.9 meters) from the front of the fireplace and keep them away from the sides and rear.



WARNING

Extreme caution is necessary when any fireplace is used by or near children or invalids and whenever the fireplace is left operating and unattended.



WARNING

Do not operate any heater after it malfunctions. Disconnect power at service panel and have heater inspected by a reputable electrician before reusing.

IMPORTANT INSTRUCTIONS



WARNING

Do not insert or allow foreign objects into the ventilation or exhaust openings as this may cause an electric shock, fire, or damage the fireplace.



WARNING

The fireplace has hot and arcing or sparking parts inside. Do not use in areas where gasoline, paint, or flammable vapors or liquids are used or stored.



CAUTION

While in use, the top center of the fireplace can become hot to the touch and may cause serious injury or burns. Always supervise small children around the fireplace. Do not place any cloth, decorations, or otherwise obstruct the fireplace outlet as this may cause a fire and serious injury may result.

SAVE THESE INSTRUCTIONS

Grounding Instructions





DANGER

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product. If it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This product must be grounded. If it should malfunction or breakdown, proper grounding provides a path of least resistance for electric current to flow and reduces the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

This fireplace is for use on 120 volt circuits and has a grounded plug. An adapter is available for connecting three-blade grounding type plugs to two-slot receptacles. The green grounding lug extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box.

The adapter should not be used if a three-slot grounded receptacle is available.

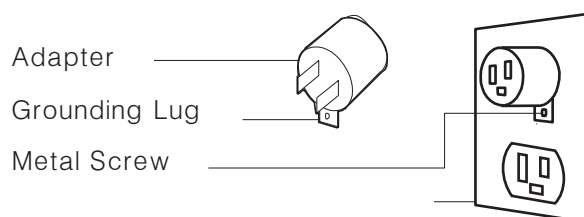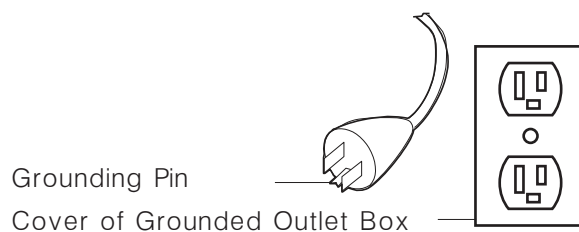

Recessed installation

1. Locating the Appliance


Your new electric fireplace may be installed virtually anywhere in your home. However, when choosing a location, ensure that the general instructions for safety are followed.

For best result, install out of direct sunlight, water or very damp air.


Power supply service must be installed within proximity of electric fireplace prior to finishing avoiding reconstruction.

2. Preparing a wall opening

Build an opening according to the dimensions outlined in the illustration below.

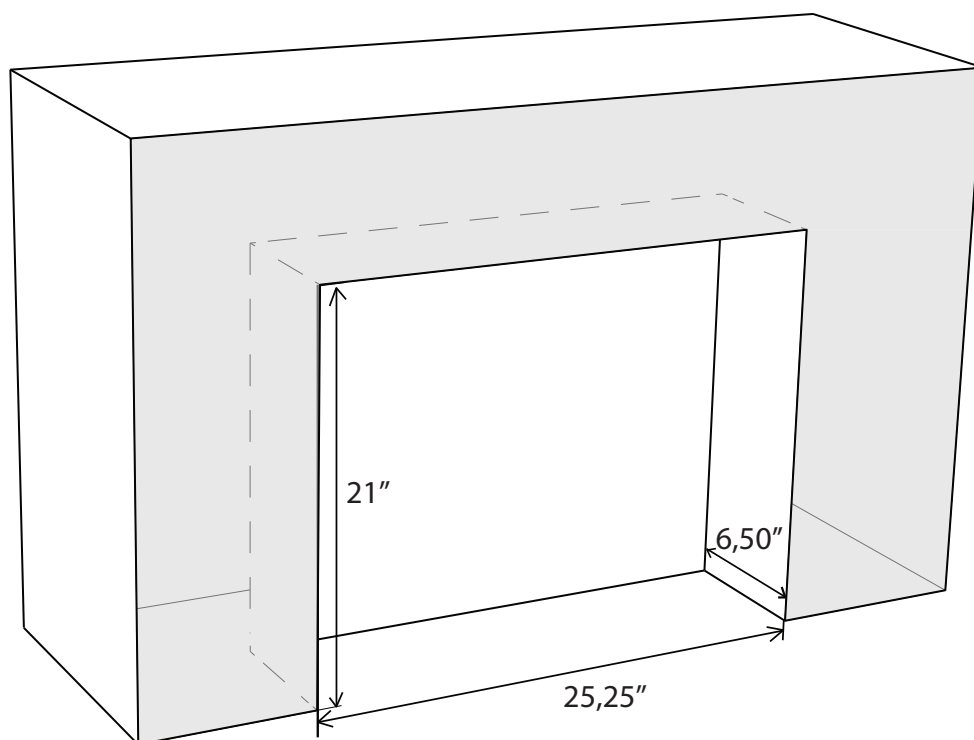


Recessed installation

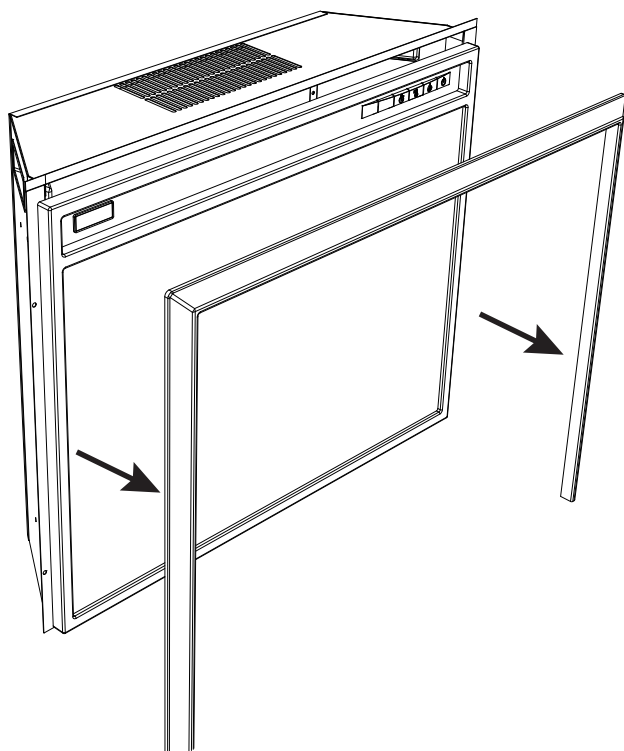

3. Remove the frame

The trim kit for the firebox is attached by magnets, pull to remove.

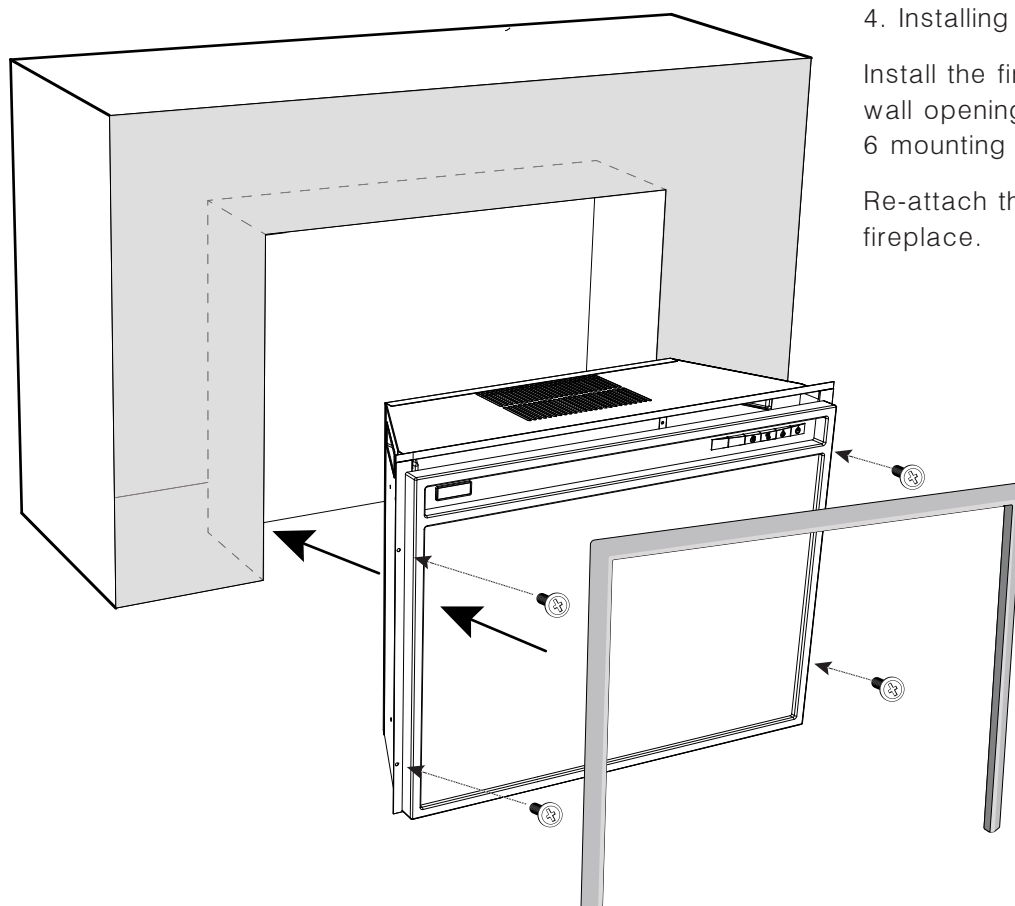

4. Installing fireplace

Install the fireplace into the wall opening and secure with 6 mounting screws supplied.


Re-attach the trim kit to the fireplace.

Recessed installation



CAUTION

Do not block the ventilation areas..

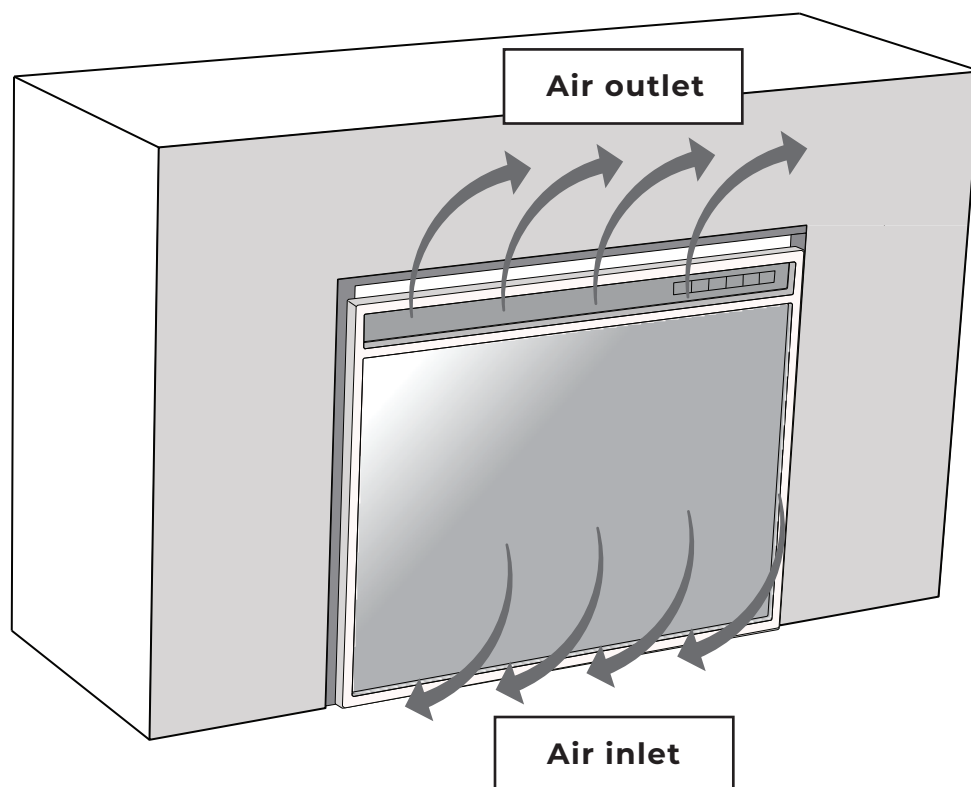

CAUTION

Clearance for air circulation beneath the fireplace insert is provided by 4 felt feet.

Do not install the fireplace insert directly on carpet or similar surfaces which may restrict air flow.




CAUTION

If installing the fireplace in a carpeted area, place a one-piece solid, flat surface under the fireplace. Ensure that all feet sit securely on this surface.

Installation into mantel


It is available to install the unit into a wood cabinet or mantel from the backside.

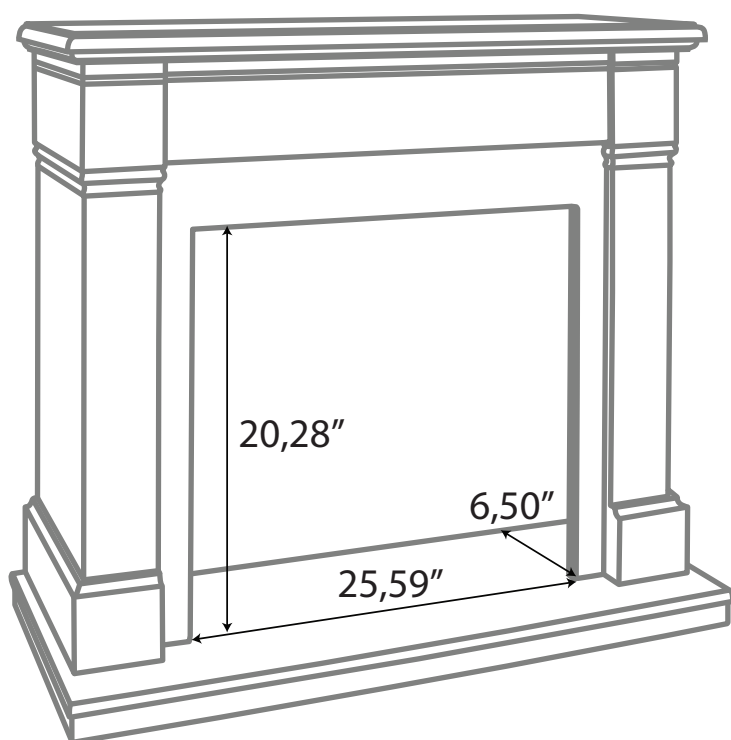

1. Mantel framing dimensions outlined in the illustration below


2. Remove the trim kit

The trim kit for the firebox is attached by magnets, pull to remove.

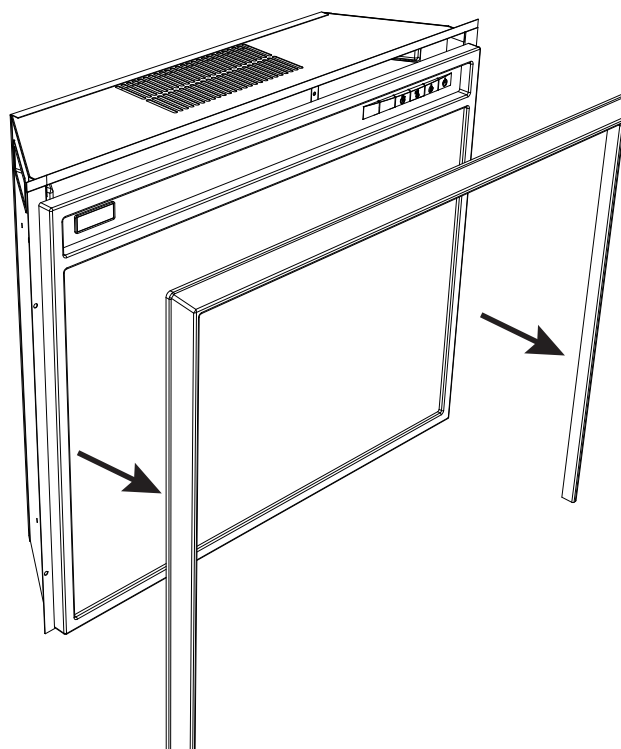


Installation into mantel

3. Installing fireplace into mantel

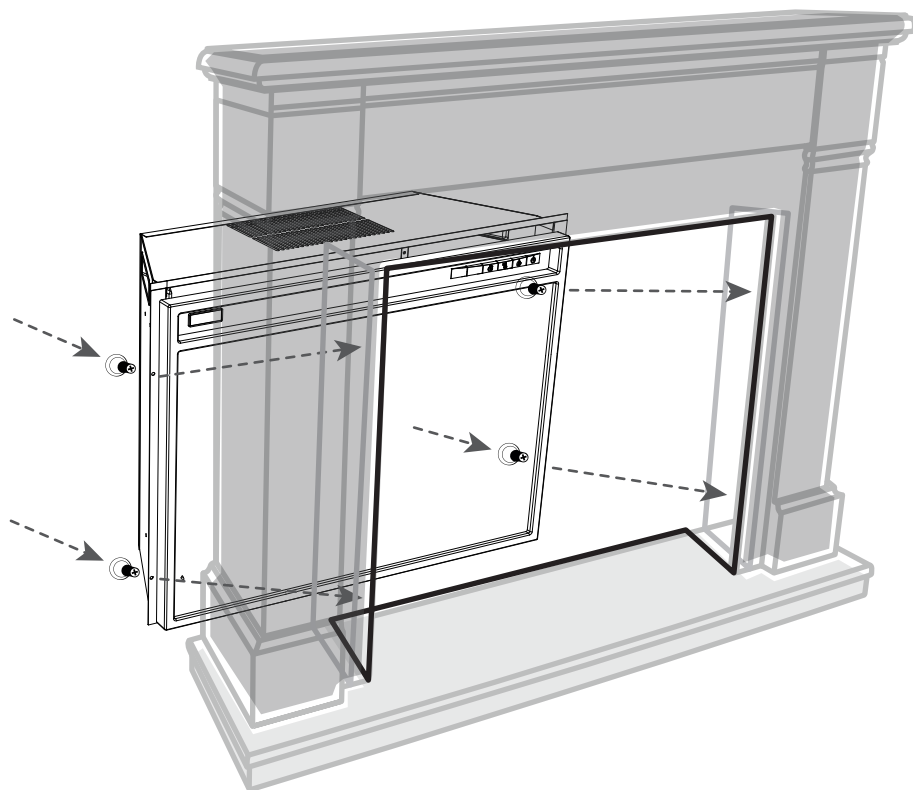

Install the fireplace into mantel from the backside and secure with 6 mounting screws supplied.

Do not block the ventilation areas.

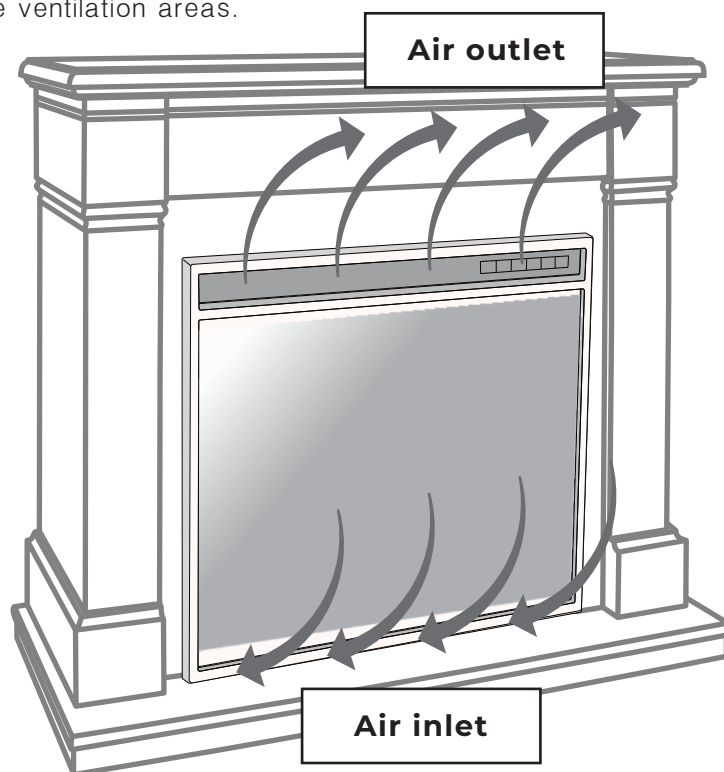

CAUTION

Clearance for air circulation beneath the fireplace insert is provided by 4 felt feet.


Operation

Product Specifications


Rating voltage	120V 60Hz
WATTS	1500 W

This electric fireplace can be operated by the CONTROL PANEL, or by the battery-powered REMOTE CONTROL.

Control Panel

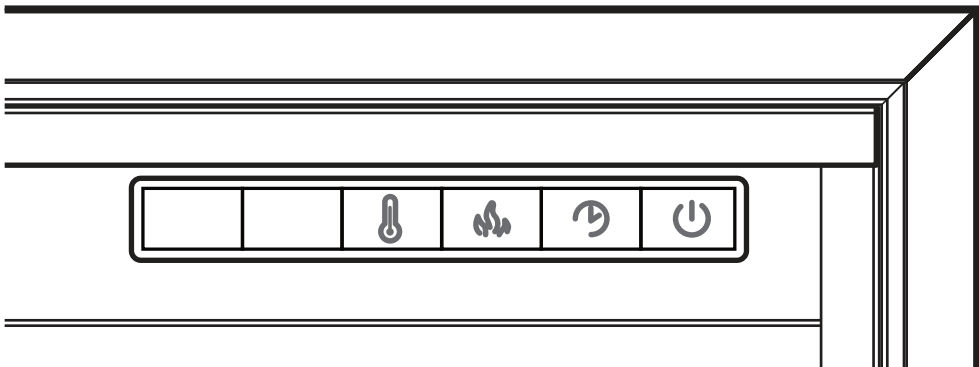

Remote Control

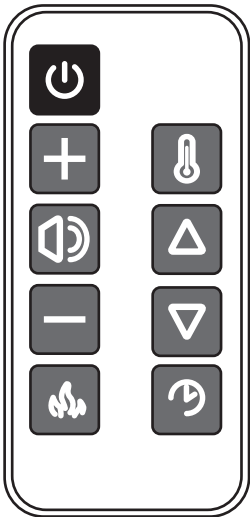

Warning: This electric fireplace must be properly installed before it is used.

Note: The element retains heat after shut down. There is a built-in cool down period of 30 seconds before the blower shuts off completely.

Note: To operate correctly, the remote control must be pointed toward the glass window view.

Operation

FUNCTION	ICON	DESCRIPTION
POWER		Turn on or turn off the fireplace.
FLAME BRIGHTNESS		Select one of four brightness levels.
FIREPLACE		1. Press once to activate the low heat setting. 2. Press the button a second time to activate the high heat setting. 3. Press the button a third time to turn off the fireplace. 4. After turning on the fireplace, press this button for 3 seconds to select the desired temperature setting. Note: pressing the power button for 3 seconds will toggle between °C and °F.
TIMER		Pressing the button will cycle through the timer setting: 30 minutes to 5 hours.
TEMPERATURE UP		Increase the heat input (remote control only).
TEMPERATURE DOWN		Decrease the heat output (remote control only).
SOUND OF CRACKLING FIREWOOD		Pressing up and down arrow buttons Control the sound of the firecracker. There are 3 settings: High - Low - Off

NOTICE

When the heater is first turned on, a slight odor may be present. This is normal and should not occur again unless the heater is not used for a long period of time.

NOTICE

To improve operation, aim the remote control at the front of the fireplace. DO NOT press the buttons too quickly. Give the unit time to respond to each command.

Temperature Limiting Control

This heater is equipped with a Temperature Limiting Control. Should the heater reach an unsafe temperature, the heater will automatically turn OFF. To reset:

1. Unplug the power cord from the outlet.
2. Turn the ON/OFF switch on the CONTROL PANEL to OFF. Wait 5 minutes.
3. Inspect the fireplace to make sure no vents are blocked, or clogged with dust or lint. If they are, use a vacuum to clean the vent areas.
4. With the POWER switch in the OFF position, plug the power cord back into the outlet.
5. If the problem continues, have your outlet and wiring inspected by a professional.

Remote Control Battery Information

Remote control uses one CR2025 battery **(NOT INCLUDED)**



NEVER dispose of batteries in fire. Failure to observe this precaution may result in an explosion. Dispose of batteries at your local hazardous material processing center.

Troubleshooting

PROBLEM	ROOT CAUSE	CORRECTIVE ACTION
Display shows 	The thermostat sensor is broken or disconnected.	Unplug the fireplace and remove the back panel. Check that the thermostat is plugged into the main circuit board. If this does not solve the problem, contact customer service for a replacement thermostat sensor.
Display shows 	Manual reset overheat protection has triggered.	Inspect the fireplace and check that the air inlets and outlets are not blocked as this may cause overheating.
Fireplace does not blow warm air.	Cool down cycle	Normal operation will continue for 30 seconds before shutting down.
	Thermostat setting is preventing the fireplace from turning on.	Adjust the temperature setting to ensure that the thermostat is set higher than the current room temperature.
The RED LED is blinking constantly and the blower motor does not start.	Air vents may be obstructed.	Ensure there are no obstructions within a minimum distance of 6 inches from the air vents. Press the Power button to restart the fireplace.
The slide out moves and the fireplace turns off automatically.	Overcurrent protection has been triggered.	After the slide out stops, press the power button to restart the fireplace.
Remote control is not working	Weak or defective batteries	Replace the remote batteries.
	Poor signal	Press the remote control buttons with an even motion and gentle pressure. Repeatedly pressing buttons in rapid succession may cause the remote to malfunction.
	Distance	Operate the remote at a distance less than 20 feet from the front of the fireplace. Point the remote at the control panel.

Care and maintenance

- The fan and flame generator motors are pre-lubricated for extended bearing life and require no further lubrication. However, we recommend periodic cleaning/vacuuming of the fan/fireplace.
 - Buff the trim using a soft cloth slightly dampened with a citrus oil based product (available at supermarkets and hardware stores). DO NOT use brass polish or household cleaners. These products will damage the metal trim.
 - Make sure the unit is turned OFF and unplugged, the heating element of the heater is cool before cleaning the fireplace.
- Any other servicing should be performed by qualified service personnel.

Customer Support

**THANK YOU
FOR CHOOSING FIREBLAZE!**



If you have any questions about assembly
or operation of electric fireplace



Please DO NOT RETURN



Contact our customer service team first
SUPPORT@FIRE-BLAZE.COM