


尺寸：90mm*65mm


FLYNOVA Pro

Flying spinner with a magic controller

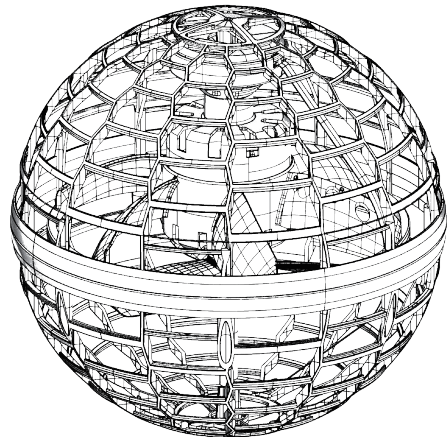

USER MANUAL

Product Overview

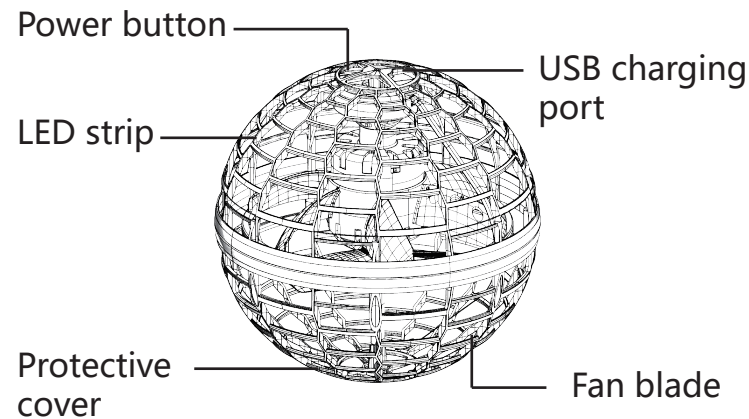

Using Modes

Turn on/turn off

Press the power button on the top of FLYNOVA Pro with your finger , the LED light bar will flash in different colors. Swing FLYNOVA Pro with your wrist, and the wind blade will start to rotate. Swing FLYNOVA Pro again, the wind blade will stop rotating. Press the power button again, FLYNOVA Pro will stop working.

Boomerang

Hold the f FLYNOVA Pro (horizontal and vertical to the ground) with one hand, tilt it upwards 15° to 45° and throw it out, the FLYNOVA Pro will fly back in the original direction. Hold the FLYNOVA Pro (horizontal and vertical ground) with one hand and tilt it 15° to 45° to the upper left or upper right. The FLYNOVA Pro will fly out in an offset direction, and then fly back to another target position along the offset direction. Tips: When throwing FLYNOVA Pro, the greater the tilt angle, the faster the flight speed. It is recommended to perform small-angle tossing exercises first, and then gradually perform larger-angle tossing exercises as the training time increases.

levitate

Hold FLYNOVA Pro (horizontal and vertical to the ground) with one hand, then release the rotating FLYNOVA Pro, place your palm on the bottom 1cm-5cm, and move slowly. The FLYNOVA Pro floating in the air will move slowly with the palm of your hand.

Fly to the target

Hold the FLYNOVA Pro with one hand (horizontal and vertical to the ground), tilt it 15° to 65° downward toward the target, release the rotating FLYNOVA Pro, and flynova pro will fly towards the target. Hold FLYNOVA Pro with one hand (horizontal and vertical to the ground) and tilt 15 ° to 65 ° to the left front or right front. FLYNOVA Pro will fly out of the left front or right front offset, and fly back to another target position along the offset direction.

Soar and Magnetic levitation (Need to buy a magic wand)

When FLYNOVA Pro is in suspension, use the magic wand to swing once, FLYNOVA Pro will fly upwards and change the light color, and swing the magic wand again, FLYNOVA Pro will continue to fly upwards and change the light color again. After stopping the operation of the magic wand, FLYNOVA Pro will gradually fly downwards freely. (You can also use the buttons on the magic wand to replace the "swing" action) Use the five-pointed star on the magic wand to magnetically attract the FLYNOVA Pro to fly, and quickly get rid of the FLYNOVA Pro with your wrist force, and it can become a floating flight state.

Product Parameter

Product name	FLYNOVA Pro
Colour	Blue / Red / Pink / Gold
Battery type	Lithium ion polymer battery
Main material	PP plastics
Charging time	About 25 minutes
Battery life	8-10 minutes
Suitable for age	Over 6 years old
Product Weight	27 g
Product Size	95mm*95mm*95mm

Precautions

1. This product contains a non replaceable battery. Please do not disassemble it or let the battery get damp.
2. If the toy is heated seriously, don't charge it. Let it cool before charging.
3. Please avoid strong impact and exposure to direct sunlight.
4. It is recommended to charge the FLYNOVA Pro with an adult.
5. Do not charge in an extremely hot or cold environment.
6. Keep away from flammable and explosive materials when charging.
7. Toys should not be used by children under 6 years old.
8. Before playing FLYNOVA Pro, please fully charge and keep the top up.
9. When playing outdoors, please avoid rivers, roads, buildings, etc., and have enough safe space to walk around.
10. Don't play with FLYNOVA Pro in bad weather such as rain, snow, thunder, electricity and strong wind, so as to avoid injury or damage to the product
11. Do not fly FLYNOVA Pro to light bulbs, light tubes, glass and other fragile products.
12. Never charge the product unattended for a long time. Disconnect the charger after the product is fully charged
13. To protect the battery life, please turn off the power of FLYNOVA Pro before charging.