

 
REMO (WATERPROOF VOICE ACTIVATED REMOTE)

CONTROL YOUR HERO6/HERO5 CAMERA WITH
YOUR VOICE FROM UP TO 33FT (10M) AWAY

USER GUIDE




THE BASICS

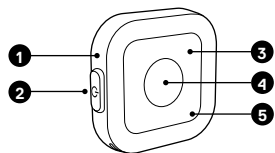

1. Battery Status Light
2. Power Button
3. Shutter Button
4. Microphone Status Light
5. Wireless Status Light (blue) / Remo Status Light (red)

CHARGING

When the battery status light turns red, charge Remo as shown below. The light turns green when charging is complete.

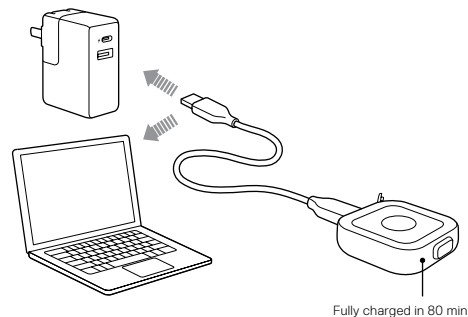


POWERING ON + OFF

POWERING ON


Press and hold the Power button.

Note: Beeps and lights mimic those on the camera.

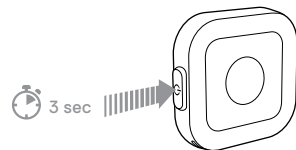

POWERING OFF

Press and hold the Power button.

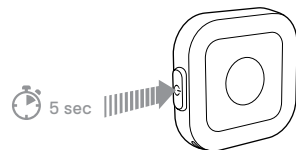

SETTING UP HERO6 BLACK / HERO5 BLACK + REMO

PAIRING

Step 1

On the camera, swipe down and then tap Connections > Connect New Device > Remo. (On HERO5 Black, tap Connect > Connect New Device > Remo.)


Step 2

If needed, select a Voice Control language on the camera.

Step 3

With Remo powered off, press and hold the Power button until the blue light blinks (about 8 seconds).

Remo vibrates once and the camera displays a confirmation when pairing is complete.

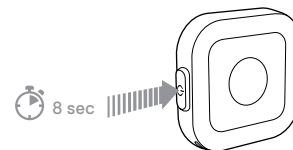

SELECTING A LANGUAGE

Remo uses the language that you previously selected when using Voice Control on your camera. If you did not yet select a Voice Control language on your camera, complete these steps.

Step 1

Swipe down and then tap Preferences > Language (in the Voice Control section).

Step 2

Tap a language.

SETTING UP HERO5 SESSION + REMO

PAIRING + SELECTING A LANGUAGE

Step 1


Press the Mode button to get to Connection Settings, then select Connect New Device > Remo.



Step 2

With Remo powered off, press and hold the Power button until the blue light blinks.

Remo vibrates once when pairing is complete.

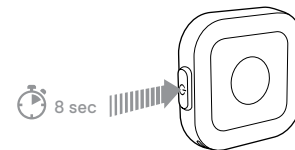

Step 3

If the language option appears on the camera, select the language that you want to use. Otherwise, Remo uses the language that you previously selected when using Voice Control on your camera.

Note: To change the Voice Control language, connect your camera to the Capture app. For details, see the HERO5 Session User Manual.

CONNECTING REMO + YOUR CAMERA

STEP 1

Turn on wireless on your camera. For details, see the user manual for your camera.

STEP 2

Power on both devices to connect them. The wireless status light on Remo blinks slowly (blue).

Note: You do not need to turn on your camera's Voice Control feature to use Remo.

If the connection to the camera is lost, Remo emits a disconnection beep and the wireless status light blinks quickly. If the connection is lost because Remo goes out of range of the camera, the connection is re-established when Remo comes back into range. For best results, be sure that your camera and Remo are not blocked by walls or other obstacles.


CONTROLLING YOUR CAMERA

To control your camera with your voice, use the commands listed on the next page. Remo has a range of 33ft / 10m and is waterproof to 16ft / 5m.

Note: Voice Control performance may be impacted by distance or significant wind and noisy conditions. Keep the product clean and clear of debris.


STEP 1

Power on Remo.

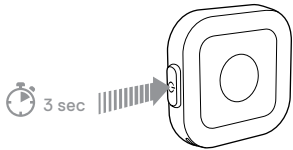

STEP 2

While facing Remo, say a command from the list on the next page. Remo vibrates, beeps, and blinks when the command is understood.

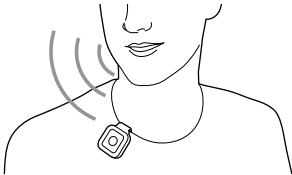

PRO TIP: With Remo, you can say any command at any time. For example, if the camera is in Video mode and you want to capture burst photos, just say "GoPro shoot burst."

LIST OF COMMANDS

For the most updated list of commands, visit gopro.com/help.

ACTION COMMANDS	DESCRIPTION	MODE COMMANDS	DESCRIPTION
GoPro turn on*	Powers on the camera (you must first manually power on the camera and then use the voice command to power it off)	GoPro Video mode	Changes the camera mode to Video (does <i>not</i> capture video)
GoPro start recording	Captures video	GoPro Time Lapse mode	Changes the camera mode to Time Lapse (does <i>not</i> capture time lapse photos)
GoPro HiLight	Adds a HiLight Tag to video	GoPro Photo mode	Changes the camera mode to Photo mode (does <i>not</i> capture photos)
GoPro stop recording	Stops capturing video	GoPro Burst mode	Changes the camera mode to Burst mode (does <i>not</i> capture burst photos)
GoPro take a photo	Captures a single photo		
GoPro shoot burst	Captures burst photos		
GoPro start time lapse	Captures Time Lapse photos		
GoPro stop time lapse	Stops capturing time lapse photos		
GoPro turn off	Powers off the camera		

PRO TIP: When Remo and the camera are on, you can press the Shutter button on Remo to begin capturing in the camera's current mode.

*Available only on HERO6 Black and requires the Wake on Voice setting to be turned on

QUIKCAPTURE

When your camera is off, you can quickly capture video and time lapse photos using the Shutter button on Remo.

STEP 1

HERO6 Black/HERO5 Black: With the camera off, press the Mode button.

HERO5 Session: With the camera off, press the Menu button.

STEP 2

Say, "GoPro turn off" to power off your camera.

STEP 3

During your activity, use Remo for QuikCapture:

- For video, press the Shutter button on Remo.
- For time lapse photos, press and hold the Shutter button for 2 seconds.


Remo vibrates, beeps, and blinks when capture begins.

PRO TIP: Once you power on your camera with the Mode button, then power it off with the Remo command, just say "GoPro turn on" to power it on again.

RESETTING REMO

If Remo isn't responding as expected, press and hold both buttons at the same time to reset it.

Note: If you reset Remo, you need to re-pair it with your camera.

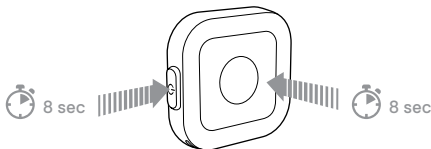

REGULATORY INFORMATION

To see additional information regarding country certifications, refer to the Important Product + Safety Instructions included with Remo.

