

CONTENTS:

- VERY IMPORTANT TIPS
- POWER SUPPLY
- RADIO OPERATIONS
- TIME SETTING
- SPECIFICATIONS
- SAFETY INSTRUCTIONS
- WARRANTY


VERY IMPORTANT TIPS

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "hazardous voltage" within product's enclosure, which may be sufficient to induce a risk of electric shock to persons.

WARNING!!!

1. There may be electric shock dangerous when you don't operate or use this machine correctly, please strictly operate in accordance with its regulations. Except for the authorized repairing personnel, never open the back cabinet arbitrarily so as to avoid the dangerous of electric shock.
2. Please don't expose the unit under the rain or humid place, preventing from water and spray. Don't put anything which fill with liquid like vase etc above this unit.
3. Please don't press or bend the AC cord of the unit, in case of the copper inside the AC cord break and lead to open circuit.
4. When fall across thunderstorm or you don't use this machine for a long time, please do pull out the AC plug.

5. Please pull out the batteries when not use DC power supply, so as to avoid batteries electronic leak liquid corroding the radio.
6. Don't use the batteries combined with new and old, or different category. Please put the dumped batteries at the place where indicate by government to avoid environment pollution.

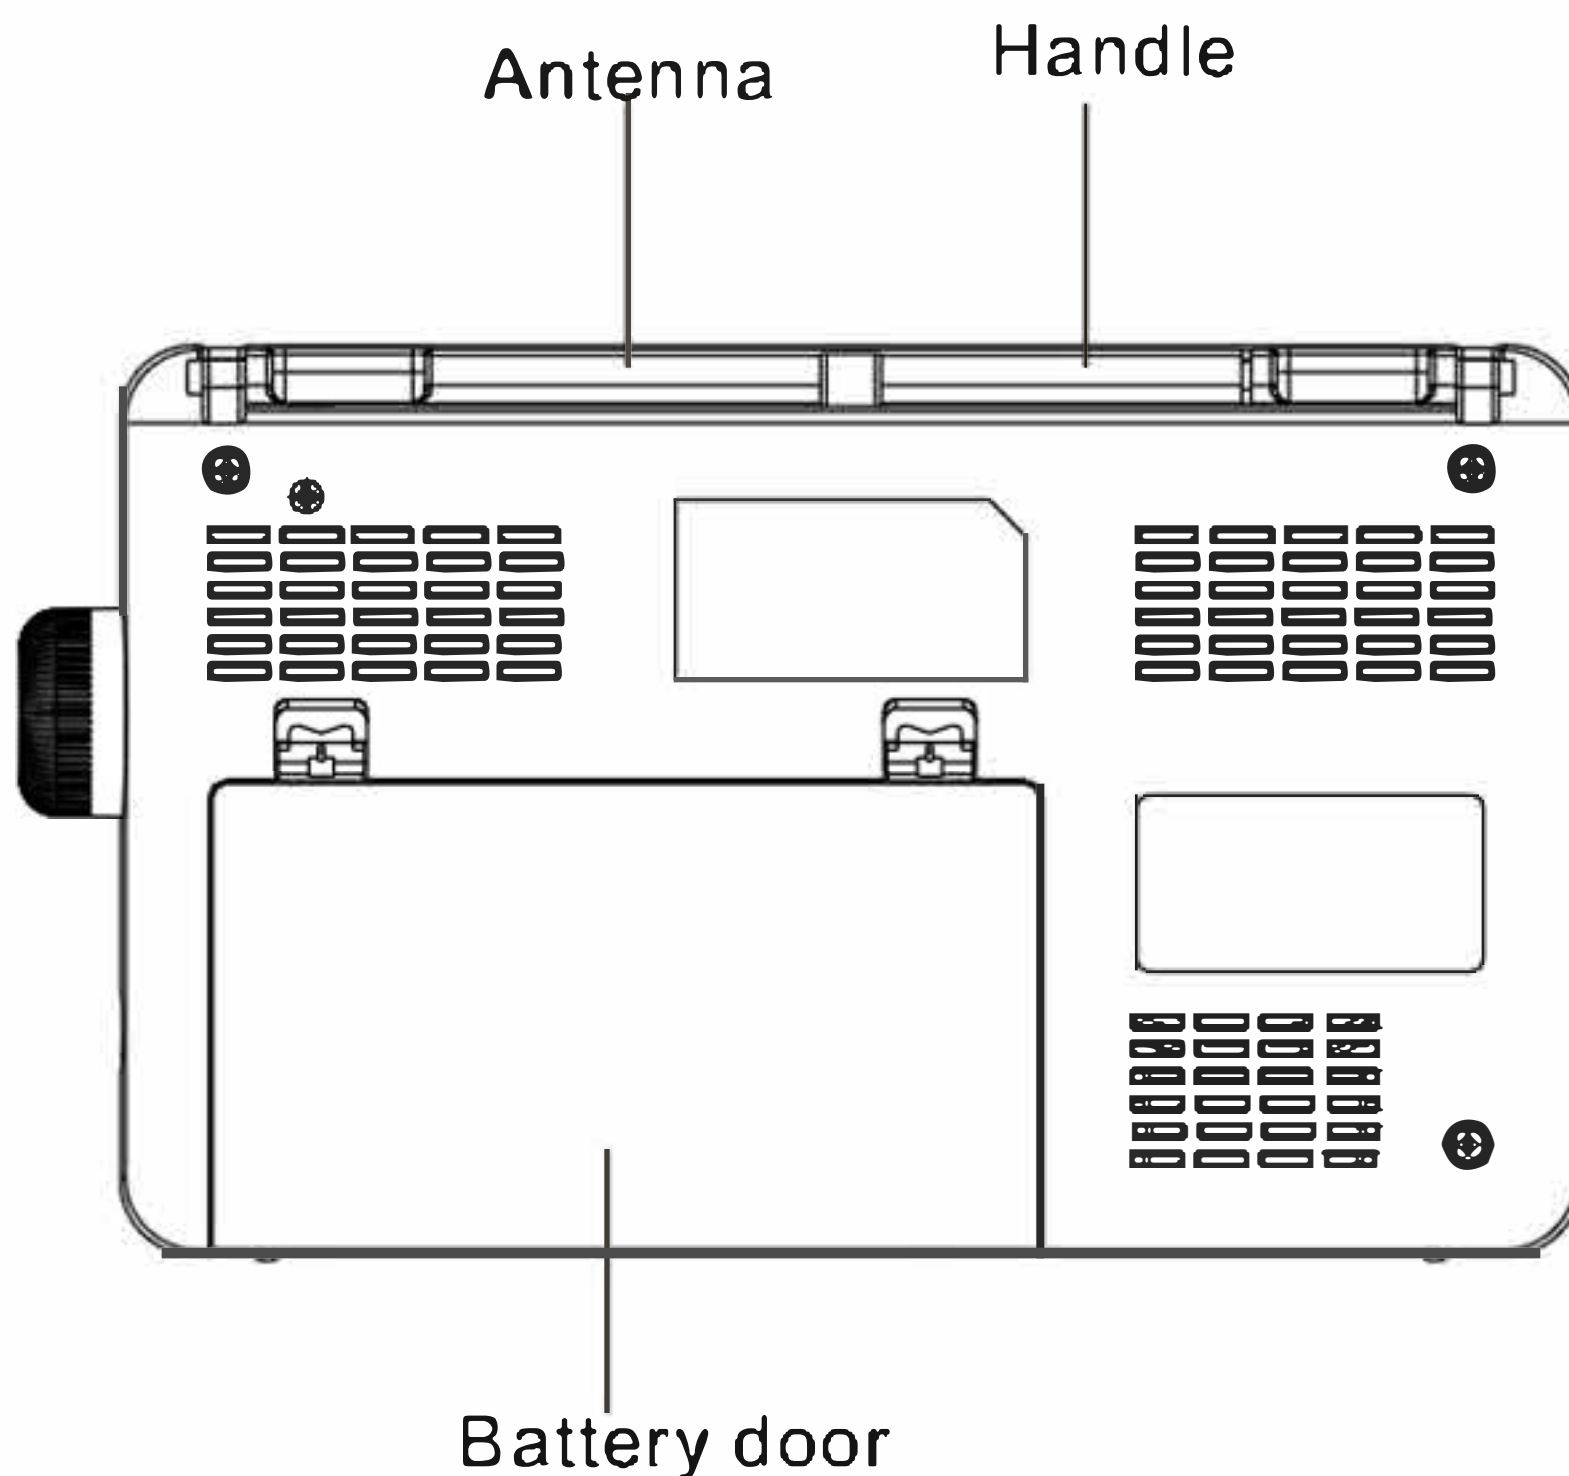

POWER SUPPLY


1.AC power supply: Please connect the inlet of the AC cord with the socket jack and put AC cord plug into power socket on the wall.

Note: 110V~50Hz for US, 220V~50Hz for Europe

2.DC power supply: Please open the battery door, and put into 4pcs 1.5VUM-1 batteries, then close the battery door.

Note:

- On the safe side, please pull out the AC plug from power supplying before installing batteries.
- Please try to use the AC power supplying because the time is limited for batteries proving power.

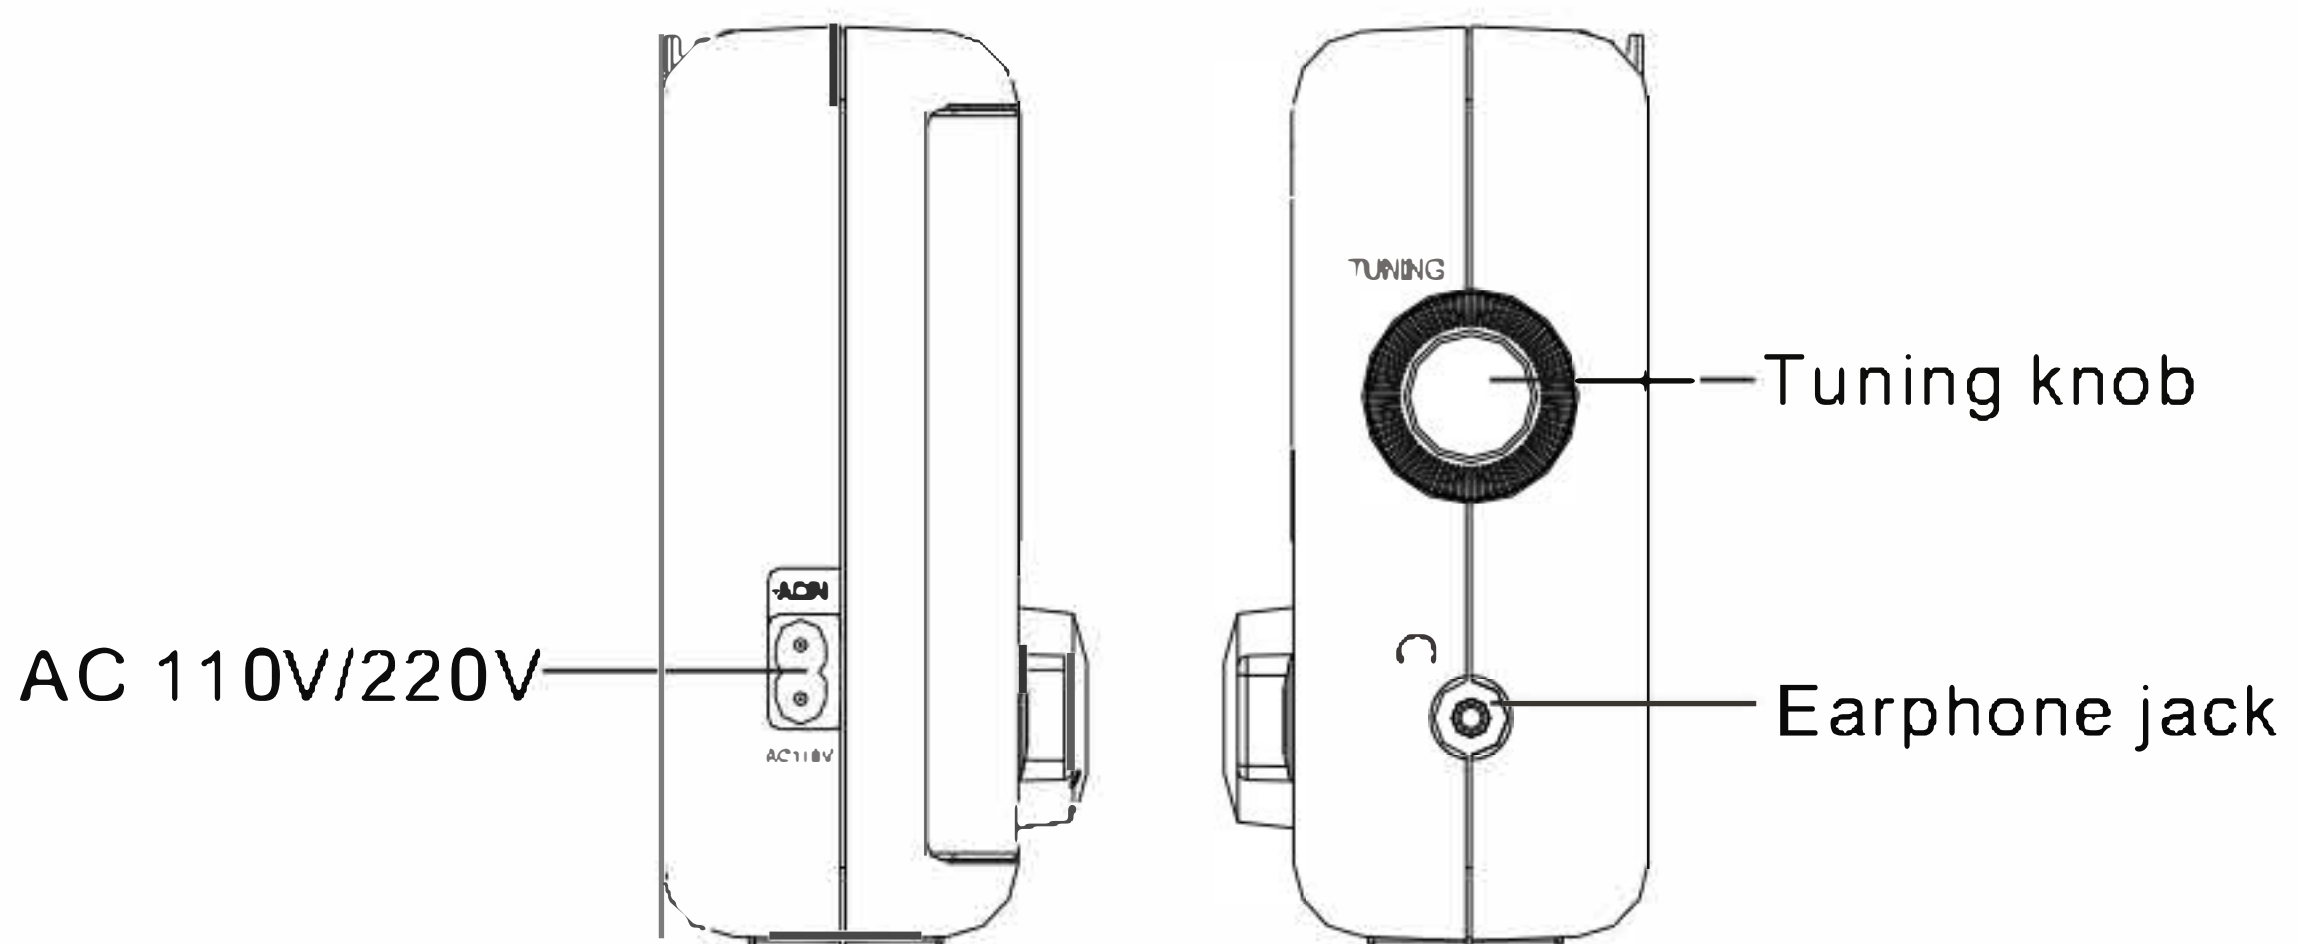

RADIO OPERATION

1. Rotate the Volume knob to turn on the radio and adjust the volume.
2. Select AM/FM/SW with Band selector. Extend the antenna to get better signal
3. Rotate the Tuning Knob on the right side to select a channel, the specific channel will display on the LCD screen while you are rotating.
4. You can select High/Low tone to listen music or radio as you like.
5. If you don't want to disturb others, you also can choose the earphone to listen radio, just plug the earphone into the earphone jack.

Note:

- If you have bad reception, please extend the antenna and change the direction to improve the reception.
- Please be gentle with the tuning knob and AM/FM/SW band selector, thanks.

TIME SETTING

1. Turn off the radio, then long press the Time Setting Button for 2 seconds.
2. The Hour character will flash on the LCD screen. Short press Hour Adjust Button to select hour, then short press Time Setting Button again to confirm hour.
3. After confirming hour, Minute character will flash and short press Minute Adjust Button to select minute, then short press Time Setting Button again to confirm.

Please kindly note that this radio uses the 24 hours timing system.

SPECIFICATIONS

Frequency range	FM: 87-108MHz AM: 520-1710KHz SW:4.70-18.00MHz
Power source	AC: 110V/220V DC: 4 X1.5V UM-1
Product material	Hips, Metal
Power consumption	6W
Speaker	3.5lin/8 Ω /2W
Dimensions	240* 60* 150mm/9.4*2.4*5.9in
Weight	760g/1.68lb

SAFETY INSTRUCTIONS

- Dropping this radio can cause injury or damage. The unit will not resist strong impact or contact with corrosive liquids.
- This radio is not waterproof. Keep this unit dry but stay away from direct sunlight, high temperature.
- Do not rub against chemical fiber, silk or other electricity products which will make static easily.
- When cleaning the case, wipe with a soft cloth and detergent solution. Do not use strong solvents such as alcohol, benzine or thinner.

WARRANTY

- This am fm sw radio has full 12-month warranty against manufacturing defects.
- The warranty period begins from the date of purchase.