

440*180mm

CAUTION!

The corkscrew within the Ozeri Electric Wine Opener is sharp. Please handle carefully. Keep your hands and utensils away from the opening of the wine opener while operating to prevent personal injury and/or damage to the product or property.

**THIS UNIT IS FOR HOUSEHOLD USE ONLY.
SAVE THESE INSTRUCTIONS.**

Thank you for purchasing an Ozeri Nouveaux Electric Wine Opener. Before using this product for the first time, please take a few moments to read these instructions and keep them handy for future reference. Pay particular attention to the Important Safeguards provided.

ABOUT YOUR ELECTRIC WINE OPENER



BEFORE USING YOUR ELECTRIC WINE OPENER

For your convenience, record the model number and the date you purchased the product. Keep your purchase receipt together with the warranty information in the event that warranty service is required. Retain this manual for future reference.

OPERATING INSTRUCTIONS

CONNECTION AND USE

We recommend that you charge your electric wine opener for at least 8 hours before using it for the first time. Please follow instructions for recharging below:

RECHARGING YOUR ELECTRIC WINE OPENER

Plug one end of the adapter cord into the base of the charging unit and the other end into the main socket. Place the electric wine opener into the recharging unit while making sure that it is firmly in position and that it is fully engaged with the recharging connections. It will take up to 8 hours to recharge your electric wine opener. After charging, disconnect the electric wine opener from the wall outlet and store the charging unit for future use. When your electric wine opener is fully charged, it can be used to open up to 60 bottles.


OPERATING YOUR ELECTRIC WINE OPENER

The electric wine opener is operated by a single up/down button. The button has two functions. With the Ozeri Electric Wine Opener securely placed on top of an unopened wine bottle, press the lower part of the button (down button) to remove the cork from the bottle. Pressing the upper part of the button will release the cork from the Ozeri Electric Wine Opener after you have removed it from the bottle.




OPERATING INSTRUCTIONS - Cont.

1) To remove the foil cutter please follow this procedure:

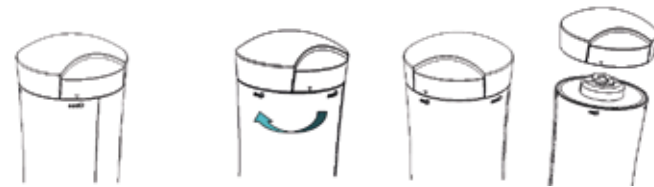

A. Initial Position: the "▼" mark is pointed to "CLOSE"
B. Gently turn foil cutter in a counterclockwise direction.
C. Turn until the "▼" mark points to "OPEN" then pull the foil cutter up to remove it.

2) Place the foil cutter on top of a bottle of wine and press inward and twist to cut and remove the wine bottle seal.

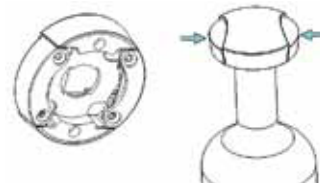

3) Place the electric wine opener on top of the wine bottle making sure that it remains as upright as possible at all times. If you hold the electric wine opener at an angle, it will not remove the cork proper.




Hold the electric wine opener firmly and press the lower part of the button. The corkscrew spiral will turn in a clockwise direction and enter the cork, then gradually remove it from the bottle. When the electric wine opener's motor has stopped, the cork has been fully removed from the bottle.

4) Lift the electric wine opener away from the bottle. To remove the cork, simply depress the upper part of the button. The spiral will turn in a counterclockwise direction and release the cork.



5) Reattaching the Foil Cutter onto the Electric Wine Opener:

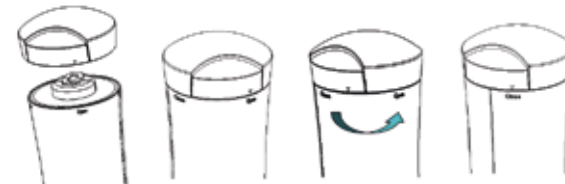

Return the electric wine opener to the recharging unit when not in use. The recharging unit will help prevent the wine opener from accidentally tipping over. While the electric wine opener can be partially recharged after each use, periodically discharging the battery by using the wine opener until the motor slows down will maximize battery performance.

Note 1: To avoid damage to the foil cutter and electric wine opener, do not press the inward moving parts of the foil cutter when it is attached to the electric wine opener.

Note 2: While the electric wine opener can be partially recharged after each use, periodically discharging the battery by using the wine opener until the motor slows down will maximize battery performance.

Note 3: The electric wine opener may experience problems with a small percentage of plastic/synthetic and undersized corks. If this is the case, the cork should be removed manually.

Ozeri
• ELECTRIC •
WINE OPENER

USER WARRANTY

1-Year Limited Warranty
Read all instructions before using.
Use only as directed.



Distributed by:

Ozeri

MODEL: OW02A

WARRANTY INFORMATION

Your product is warranted to the original owner for 1 year from the date of purchase against defects in material and workmanship under normal use and service. Should your product prove defective within 1 year from the date of purchase, return the defective part or unit, freight prepaid along with an explanation of the claim to Ozeri. Please pack your product carefully to avoid damage in transit. Under the warranty, Ozeri will repair or replace any parts found to be defective due to manufacturer's defect. This warranty extends only to personal use and does not extend to any product that has been used for commercial use, rental use, or use which is not intended. There are no warranties other than that expressly set forth herein. This warranty is not transferable. Ozeri is not responsible in any way for damages, losses or inconveniences caused by equipment failure or by user negligence, abuse, or not in accordance with the user guide or any additional safety, use, or warnings included in the product materials. Further, Ozeri is not liable for incidental or consequential damages of any nature resulting from the use of this product and any liability shall not exceed the purchase price of the product. This Warranty gives you specific legal rights. You may also have other rights which vary from state to state.

THIS WARRANTY DOES NOT APPLY TO THE FOLLOWING:

- Damage due to accident, misuse, abuse, alterations or vandalism.
- Improper or inadequate maintenance.
- Unauthorized modification or commercial use.
- Damage in return transit
- Unsupervised use by children under 18 years of age

Ozeri Electric Wine Opener
Tel: 1-877-299-1296 or
Email: support@ozeri.com

(Ozeri™ and its subsidiaries assume no liability for damage caused by the use of the Ozeri wine opener other than for its intended use or as instructed above and in the User Manual.)

Ozeri
• ELECTRIC •
WINE OPENER

USER MANUAL

Important Safety Information Inside!
Read all instructions before using.
Use only as directed.



Distributed by:

Ozeri

MODEL: OW02A

IMPORTANT SAFEGUARDS

When using electrical appliances basic safety precautions should always be followed including the following:

READ ALL INSTRUCTIONS BEFORE USE

- This product is not a toy. Keep out of reach of children.
- Do not operate electric wine opener with a damaged cord or plug, after the appliance malfunctions or if it is dropped or damaged in any manner. Return appliance to the nearest authorized service center for examination and repair.
- To protect against risk of electrical shock, do not put the electric wine opener in water or any other liquid. This may cause personal injury and/or flammable fumes.
- To protect against fire, do not operate the unit in the presence of hazardous materials and/or extreme temperatures.
- This product is intended for normal domestic household use only. Do not use the electric wine opener for other than its intended use.
- When using or recharging the electric wine opener keep your workspace clean and free from potential hazards.
- For indoor use only. Do not expose the electric wine opener or charging unit to rain or other extreme conditions.
- Never force the electric wine opener onto a bottle or attempt to speed up the motor. The electric wine opener will work best when it is operated at its intended speed.
- Do not touch or adjust the electric wine opener's motor or the corkscrew spiral. Only hold the electric wine opener by its outer housing and its indicated grip.
- Do not attempt to open bottles if the up/down button is not working.
- Do not attempt to disassemble the electric wine opener or the recharging unit. It has no serviceable parts. Your electric wine opener is guaranteed for one year. In the event of a malfunction during your warranty period, please contact our customer service department.
- Only recharge the electric wine opener using the recharging unit supplied.
- Always unplug the charger if you do not intend to use your corkscrew for a long period. To disconnect from the power supply, grip the transformer and pull from the power socket.
- Never remove the plug from socket by pulling the power cord.