

SHARPER IMAGE®

NOISE CANCELLING BLUETOOTH HEADPHONES

Item No. 206606

User Guide



Thank you for choosing the Sharper Image Noise Cancelling Bluetooth Headphones. Please take a moment to read this guide and store it for future reference.

FEATURES

- Bluetooth 4.1
- Noise cancelling technology
- Pairs easily with all iPhones, iPads, Samsung Galaxies and other Android devices
- Over 20 hours play time
- Built-in microphone for hands-free phone calls
- Includes micro USB charging cable and a 3.5mm audio cable
- Includes travel case

HOW TO CHARGE THE HEADPHONE BATTERY

1. Plug the included micro USB charging cable into the USB port on your headphones then plug the USB end into your computer or USB charger (not included). The LED will illuminate in solid red while charging.
2. Once the battery is fully charged the LED light will turn blue.

Note: Before using the headphones, you must fully charge the battery and connect the headset to your Bluetooth device. Charge time is 2 hours. The Noise Cancelling Bluetooth Headphones should only be used with the included charging cable.



BLUETOOTH PAIRING

While powered off, press and hold the power button for about 3 seconds until the Bluetooth LED flashes blue. The prompt voice will say “Pairing”, now the headphone is on pairing mode and ready to connect with your Bluetooth enabled device. Go to your Bluetooth settings on your phone and connect to “BTN-26.”

Note: The headphone will enter power-on mode if you release the power button before the Bluetooth LED flashes blue. If this happens, turn the power off and repeat steps above.

FUNCTIONS

1. **Answer phone calls:** Press the power button once to answer incoming calls.
2. **End phone calls:** Press the power button once to end a phone call.
3. **Redial last called number:** The device will automatically call the last dialed phone number by double pressing the power button on the Bluetooth headphone. You will hear a prompt tone when redialing.
4. **Volume control:** Adjust the volume while listening to music or taking phone calls by holding down the volume up button to increase sound or holding down the volume down button to decrease sound.
5. **Previous or next song:** Press the volume up button to skip to the next song. Press the volume down button to listen to a previous song.
6. **Pause or play:** Press the power button to play or pause music.
7. **ANC function:** Slide the ANC (active noise control) switch to on to activate the noise cancelling function. To deactivate slide the switch off.
8. **Wired headphone function:** The headphone can be used as a wired headphone when using the included 3.5mm audio cable.

Note: Only use the included 3.5mm audio cable to connect to the headphone directly to a 3.5mm audio source.

SPECIFICATIONS

Dimensions	7.7" L x 6.9" W x 2.9" H
Speaker size	1.57 inches
Rated power	20mW
Speaker sensitivity	S.P.L: 110dB S.P.L at 1KHz
Frequency response	20Hz-20KHz
Microphone sensitivity	-42±3dB
Microphone frequency response	30-16KHz
Operating voltage	4.2V
Bluetooth version	4.1
Bluetooth range	32.8 ft.
Carrier frequency	240MHz-2480MHz
Pairing Code	0000
SNR	-92dBm
Transmit power	4dBm[max]
Battery	Li-ion, 3.7V/420mA
Length of 3.5mm audio cable	48 inches
Time charge	2 hours
Battery life	20 hours

SAFETY INFORMATION

Note: Please read carefully the following information before using.

- 1. Electronic Equipment:** To avoid the side effects of electronic interference, turn off the headphones in the places where there are clear marks to ban the using of electronic products.
- 2. Civil Aviation:** Turn off the headphones after boarding a plane and don't use during flights to avoid the interference to civil aviation communication system.
- 3. Medical Instruments:** Do not use in hospital or near the medical instruments without permission. If you use other personal medical equipment, such as a pacemaker please consult with your medical doctor.
- 4. Maintenance:** User should not change any components of the headphones.

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.
©Sharper Image. All Rights Reserved.

[Click Here to Read More....](#)

[Mobile friendly optimized manual:
Sharper Image Noise Cancelling Bluetooth
Headphones User Manual](#)