

SHARPER IMAGE®

ULTRA-PLUSH FOOT WARMER

Item No. 206002

Owner's Manual

Thank you for purchasing the Sharper Image Ultra-Plush Foot Warmer.
Please read these instructions prior to using this device for the first time.
In addition, please store this guide for future reference.

FEATURES

- Luxurious, electric foot warmer
- Soft fiberfill center
- Neutral ivory color
- Great for office or home
- Fits neatly under a desk
- Can be used on the bed under regular blankets
- Accommodates two pairs of feet
- Three heating options: Low / Medium / High
- Machine washable and dryable [remove controller first]
- 60" power cord
- Size 35" L x 20" W
- 110V-60Hz 60W

INSTRUCTIONS

- The wired controller has Low / Medium / High heat settings with a 2-hour auto timer.
- Slide the large On/Off button upward to turn it on.
- Press the smaller button to cycle through the three heat settings:
 - 1 light = Low
 - 2 lights = Medium
 - 3 lights = High
- The Ultra-Plush Foot Warmer will rapidly warm up to 86°F as a pre-heating function for all three settings.
- Slide the On/Off button down to turn the power off. *NOTE: For safety, the Ultra-Plush Foot Warmer will shut off automatically after 2 hours.*

CARE AND MAINTENANCE

- Unplug the Ultra-Plush Foot Warmer from the electrical outlet when not in use.
- Unplug the Ultra-Plush Foot Warmer from the electrical outlet before cleaning.
- Machine wash on gentle if necessary. Remove controller before washing.
- Do not dry clean.
- Store the Ultra-Plush Foot Warmer in a cool, dry place.

CAUTION

- This product is not a toy. It is not to be used by children.
- Excessive exposure to heat can lead to burns. Discontinue use if you see redness on the skin.
- Do not modify the unit or use it for any unintended purpose.
- Stop using the product immediately if you experience overheating or discomfort.
- Do not use the product when wet.
- Do not beat or misuse the Ultra-Plush Foot Warmer.
- Do not place heavy items [such as a suitcase] on the Ultra-Plush Foot Warmer.
- Do not carry the Ultra-Plush Foot Warmer by its power cord.
- Do not use this product with other heat sources [heater, hot water bottle, etc.].
- This device has a resistance safety switch which protects it from overheating. In the unlikely event of overheating, discontinue use.
- To ensure long product life, do not use the Ultra-Plush Foot Warmer for more than 12 hours continuously. After 12 hours of use, turn it off for at least 30 minutes.
- Inspect the Ultra-Plush Foot Warmer from time to time. If you notice any overheating or yellowish coloring/rigidity on the cable, unplug it immediately and discontinue use.

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. For Customer Service, please call 1 (877) 210-3449.

[Click Here to Read More....](#)

[Mobile friendly optimized manual:](#)

[Sharper Image Ultra-Plush Foot Warmer Instruction / Cleaning Manual](#)

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.
©Sharper Image. All Rights Reserved.