




**Wireless
Speaker**

S1 |
QUICK START GUIDE

1.Part name

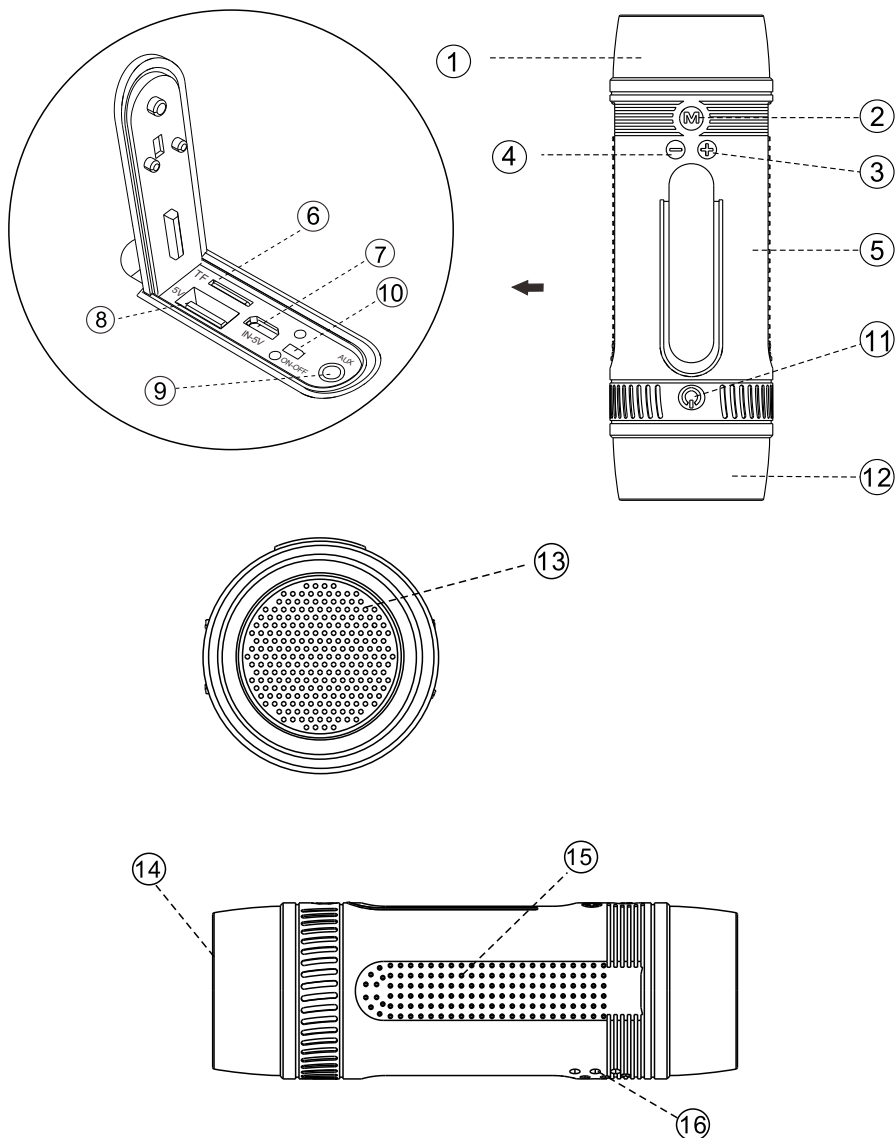

- | | |
|--------------------|---------------------------|
| ① Speaker cover | ⑨ AUX |
| ② Mode button | ⑩ Power button |
| ③ Volume+/Next | ⑪ Flashlight power button |
| ④ Volume-/previous | ⑫ Lampshade |
| ⑤ Silicon case | ⑬ Speaker nets |
| ⑥ TF slot | ⑭ PVC transmittance sheet |
| ⑦ Charge port | ⑮ Skid particles |
| ⑧ 5V/1A output | ⑯ Membrane pores |

2.Product Specifications

Output voltage: 5v / 1A

Speaker: 4Ω

Transmission distance: 10m

Output power: 3w

Frequency response: 20Hz-20KHz

SNR: ≥90dB

Dimensions: 156x51x51mm

Distortion: 1%

Operating voltage: 3.7V

LED lamp power: 1W

Weight: 260g

3.Warm prompt

Keep using around your mobile phone

Bluetooth works between your phone and speaker, which is the straight line without blocking range about 10 meters, beyond this distance it may appear to decline in sound quality and lost connection.

How to reconnect

- 1.Your speaker will attempt to reconnect the lost link.
- 2.If the speaker does not attempt to relink, please manually reconnect by the phone's Bluetooth device menu.


4.Startup and shutdown

Startup:

Push the power button to "ON",

Startdown:

Push the power button to "OFF",

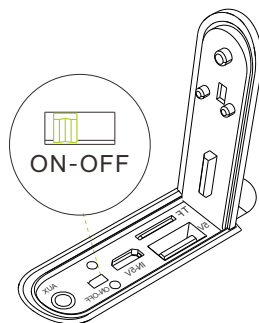

5.Charging

- 1.When the power of product is insufficient, there is a warming tone to remind you to charge it.
- 2.Insert USB cables into the adapter or computer USB port and body, then the red indicator will light; When fully charged, the red indicator will go out.
- 3.The charging time will be different for the different adapters and computer USB charging ports,reminding users to charge the product.

Power	Fully	Low power
Voice prompt	-	Low power
LED indicator	The indicator will go out	The red indicator will light

6.Function introduction

Product mode switching sequence: Bluetooth→TF card→FM Radio→Audio Plug(TF and AUX mode is defaulted into priority, pull out TF card or audio cable,it will be auto-shift to FM radio mode.

①Bluetooth mode

Push switch to "ON",you will hear a beep "Bluetooth mode, Bluetooth is ready for connection,blue LED lights flash. Then double-click"M"key.There will be "ding-dong"beep after voice modelshife sucessfully.Search for Bluetooth devices "S1"clickon the link,you can play music from the phone;Underbluetooth mode,if incoming call,short-press "M" button to answer a call,long-press the "M" key to reject, double-click "M" key to call back the last out going calls. Short press ⊖, ⊕ to adjust previous and next;long press to adjust the volume;short press "M" key to pause / play; long press "M" key for mode switching.

②TF card mode

Insert TF, you will hear the beep "TF card mode (music player mode)", play music from TF card, Short press ⊖, ⊕ to do previous and next shift. Long press ⊕, ⊖to adjust the volume; short press "M" key to pause / play; long press "M" key for mode switching.

③ Radio mode

Long press "M" key to switch to radio mode, you will hear a beep, "the radio mode", short press "M" for automatic station searching, after searching finished, radio will play the first station searched. Short press $\ominus$, $\oplus$ to do previous and next shift. Long press $\oplus$, $\ominus$ to adjust the volume; Short press "M" key to pause/play; Long press "M" key for mode switching. Insert charge line may receive better radio effect .

④ AUX (audio) mode

Insert an audio cable, you will hear the beep "LINE IN mode (AUX input mode)" to switch to AUX mode.

⑤ Mobile power bank

Input: Must use 1A or above 1A current to charge, indicator light is red when charging; The blue light will flash when it is charged above 75%, charging is completed when the red and blue light keep being on. Output: When the phone needs to be charged, can be inserted into the USB port to charge.

⑥ Lighting

When to open flashlight, The first time to press "☀" "is to open the bright light, the second time is to

open general light, the third time is to be quick flash-light mode, the fourth time to short press is to close the flashlight.

⑦ **Data transmission**

Use USB cable to transmit data, when connect into computer, product can be charged, When transmit the data, product should be on and insert TF card to copy the data.

⑧ **Low power remind**

During use, if the power is low, there will be low voice prompts "low power please charge (Low battery)"

7.Product characteristics

Standby time: ≥ 30 days

Waterproof

Dropproof

8.Note

- Do not throw this product into water or fire.
- Do not modify, repair or dismantle the equipment.
- Do not make it contact with combustible materials directly.
- Please keep the device away from damp and dusty environments.
- Before charging please check whether the charger model is suitable for this product.
- Do not use bluetooth function when charging.
- Do not use the product when charging, it is recommended to charge the speaker every month.

Any changes or modifications without the express consent could cause the user to lose the operating rights of device. Replace the battery improperly may be an explosion hazard.



PRECAUTIONS



Extremely loud music can drown out sound of traffic or other danger signals. Make sure you can always hear what is going on around you.

