



For FAQs and more information, please visit:

www.eufylife.com



Owner's Manual

MiracleBlend D1 Blender

Table of Contents

02 Important Safety Instructions

03 What's in the Box

04 At a Glance

05 Using the Blender

Important tips before use

Assembly

Overload protection system

Blending programs and speed settings

08 Troubleshooting

09 Cleaning and Maintenance

Clean the measuring cup, lid, pitcher, and blade assembly

Clean the motor base

Storage

10 Specifications

10 Notice

11 Warranty

12 Customer Service

HOUSEHOLD USE ONLY

Thank you for purchasing MiracleBlend D1 Blender. This blender is a high-powered kitchen tool perfect for blending and controlled processing. For best results, read all instructions before using this product, and keep for future reference.

Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed including the following:

- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter.
- Do not let the cord make contact with a hot surface, such as a stove.
- Do not operate this appliance when the pitcher is empty.
- Do not leave your appliance unattended when operating.
- Do not blend pure dried foods, as it may cause the motor to operate at a high temperature, resulting in the risk of the motor overheating.
- Do not blend hot liquid.
- Do not let content inside the pitcher exceed the maximum line indicated on the pitcher.
- Do not leave foreign objects, such as spoons, forks, or knives in the container as this will damage the blades and other components when starting the machine and may cause injury.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact the manufacturer at their customer service telephone number for information on examination, repair, or adjustment.
- Do not operate this appliance near a stove or any other heat source.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- Air-dry this appliance completely before use.
- To protect against the risk of electrical shock, do not immerse the motor base in water or other liquid. Use only a moist cloth to clean the motor base.
- Children should be supervised to ensure they do not play with this appliance.
- Cleaning and maintenance shall not be performed by children without adult supervision.
- Always unplug this appliance when not in use, before assembly or disassembly, and before cleaning.
- Always make sure the lid is properly installed on the pitcher and the measuring cup is attached properly to the lid before turning on this appliance. Always turn off this appliance before removing the pitcher.
- Before you connect this appliance to the power, make sure the voltage indicated on the bottom of this appliance corresponds to the local power voltage.
- Avoid making contact with the moving parts.

- The use of attachments, including canning jars, not recommended by the manufacturer may cause a risk of injury to persons.
- While blending, keep hands and utensils out of container to avoid severe injury to persons or damage to this appliance. A scraper may be used but must be used only when the blender is not running.
- Turn this appliance off, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- Blades are sharp. Handle or clean blades and blade assembly in the container with extreme care to avoid injury.
- Always operate this appliance with lid in place.
- Never attempt to operate with damaged blades.


SAVE THESE INSTRUCTIONS

Safety Protection System

This blender is equipped with an internal overload protector. If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down to room temperature. Then reconnect to the power supply and turn on the blender again. Contact eufy Customer Support if the blender automatically shuts off too often due to overheating.

The safety switch on the top of the motor base can help lock the pitcher in place. When the safety switch does not detect the pitcher, the blender will stop working automatically.

What's in the Box

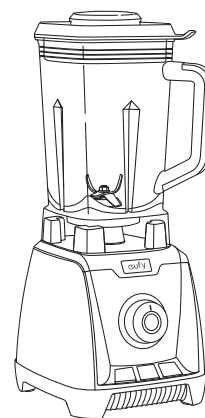

MiracleBlend D1 Blender




Vacuum Container
(with Pump)



Owner's Manual, Recipe Book,
& Happy Card

At a Glance

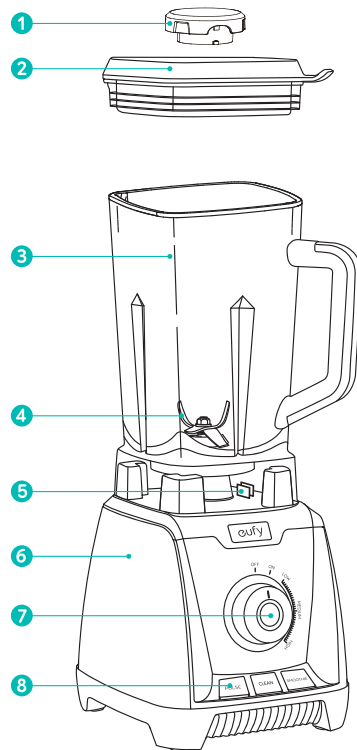

- 1 Measuring cup
- 2 Lid
- 3 Pitcher (1.5L)
- 4 Blade assembly
- 5 Safety switch
- 6 Motor base


- 7 Control knob
 - OFF:** Turns off the blender
 - ON:** Turns on the blender and switches to standby mode
 - LOW:** Activates low speed blending
 - MEDIUM:** Activates medium speed blending
 - HIGH:** Activates high speed blending
- 8 Function buttons
 - PULSE:** Hold for PULSE blending; release to stop.
 - CLEAN:** Press to start the CLEANING blending program.
 - SMOOTHIE:** Press to start the SMOOTHIE blending program

Using the Blender

Important tips before use

- Make sure the power switch is set to the OFF position.
- Thoroughly clean the blender with a soft cloth. Rinse and dry thoroughly. All parts (except the motor base) can be washed in the dishwasher.
- Be careful when handling the blades as they are extremely sharp.
- Hot liquids can erupt during blending. Do not blend hot or boiling ingredients. Allow ingredients to cool down before placing in the blender. This is to safeguard against sudden bursts of steam that could cause the lid to dislodge.
- The blender is not suitable for mixing dry ingredients. Never run the appliance when the pitcher is empty.
- Place the pitcher onto the motor base with a downward motion to avoid damaging the contacting parts.

Assembly

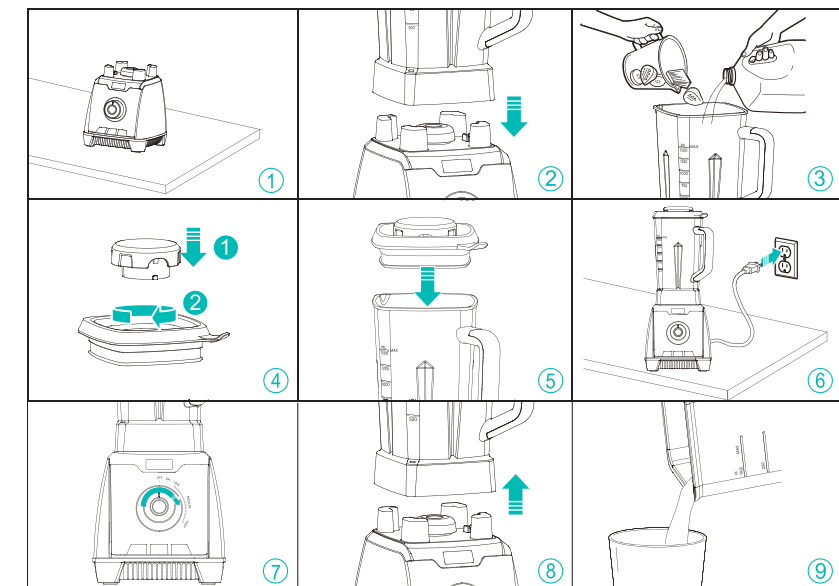

- 1 Place the motor base on a dry, level surface.
- 2 Lower the pitcher onto the motor base.
- 3 Place the ingredients into the pitcher. (For how to make quick and healthy foods, refer to the included Recipe book).

★When blending any kind of liquids, do not exceed the MAX line indicated on the pitcher.

- 4 Attach the measuring cup onto the lid and turn clockwise to lock in place.
*To add ingredients, turn the measuring cup counterclockwise and lift off. Do not remove the measuring cup while blending at high speed.
- 5 Attach the lid onto the pitcher to lock it in place. Ensure the lid is tightly locked onto the pitcher.
- 6 Connect the power plug to an outlet.
- 7 Select a blending program or speed setting to start blending (Refer to the **Blending programs and speed settings** section in this manual).
- 8 When blending is finished, turn the power switch to the OFF position, then pull the pitcher straight up to remove from the motor base.
- 9 Remove the lid to pour out the contents.

 Unplug the power cord from the power outlet after use.

Overload protection system

The blender is equipped with an internal overload protector to protect the motor from overheating. If the blender suddenly stops during use, this protector may have tripped. In such cases, follow the instructions below:

- Disconnect the power supply, remove the pitcher, and let the motor base cool for at least 30 minutes.
- Tripping the protector indicates that the blender is being loaded too heavily or used excessively. Reduce the amount of ingredients or leave more time before the next use to prevent it from happening again. This will help to preserve the life of the motor.
- The MAX line is a good indicator to prevent overloading. Make sure the quantity of ingredients does not exceed the MAX line towards the top of the pitcher.

Blending programs and speed settings

Follow the chart below to process what you will be blending. However, the blending time should be properly adjusted to suit your own tastes, different food quantities, and food manufacturer's instructions.

Note: If you want to prepare a larger quantity, let the blender cool down to room temperature before you process the next batch of ingredients.

Button	Max Duration	Speed	Action	Ideal for
Control knob (LOW / MEDIUM / HIGH)	3 minutes	Set desired speed (within LOW - HIGH range)	Switch on/off; Set desired speed	Manual control for coarse textures and fine mixtures
SMOOTHIE	1 minute	Preset speed	Press once to start. Press again to stop.	Various smoothies or drinks
PULSE	3 Minutes	Max speed	Press and hold to start; Release to stop.	Blending at max speed

-  - After the device is turned on, press and hold the PULSE button at any time to bring the motor to max speed. Release the PULSE button to return to the previous blending mode.
- To adjust the speed during SMOOTHIE program, turn the control knob to set your desired speed. If you have selected a speed with the control knob, the SMOOTHIE and CLEAN button will not work.
- To stop any program during mid-operation or to turn off the blender, turn the control knob to the OFF position.
- During blending, count your time carefully to avoid over-processing.

Troubleshooting

Problem	Possible Causes	Solutions
The blender is emitting smoke or an abnormal smell.	- Too many ingredients in the pitcher - Only dried ingredients in the pitcher (no liquids) - Motor overload	- Immediately cut off power and stop using. - Let motor cool down for at least 30 minutes. - Reduce the amount of ingredients or leave more time between usage intervals.
The blender does not work.	- Blender isn't plugged in - Blender isn't turned on - Pitcher isn't properly attached to the motor base - Blender overheated or overloaded - Too many ingredients in the pitcher - Blender malfunctioned - Improper usage	- Insert the plug into the wall outlet. - Turn on the blender, then select a blending program to start operation. - Properly align the pitcher with the motor base. - Turn off or unplug the device to let it cool down before using. - Turn off the device and turn the control knob to the ON position to place the device in standby mode. Resume blending operation. - Turn off the device, remove some of the ingredients in the pitcher, shake remaining ingredients to redistribute, and restart blending. - If you have selected a blending speed with the control knob, the SMOOTHIE and CLEAN buttons will not work. Refer to the Blending programs and speed settings section in this manual for how to operate properly.
The blades are spinning very slowly.	- Too many ingredients in the pitcher - Motor overload - Not enough liquid in the pitcher	- Turn off the device, remove some of the ingredients in the pitcher, and restart blending. - Turn off or unplug the device and let it cool down before using. - Turn off the device, add liquid, and restart blending operation.
The blender suddenly stopped while blending.	- Pitcher was lifted from the motor base during blending - Motor overheated - Power was disconnected	- Do not lift or shake the pitcher during blending. - Turn off the device, and allow the motor to cool for 30 minutes. - Check if the wall outlet has power.


Ingredients are not fully blended	- The size of the ingredients are too large - Too many ingredients in the pitcher - Not enough blending time	- Turn off the device, remove ingredients and cut them into smaller pieces. - Turn off the device, remove some of the ingredients, and then restart blending. - Blend the ingredients for the proper amount of time.
Contents overflowing out of pitcher	- Too many ingredients inside the pitcher - Ingredients inside pitcher are too hot	- Reduce the quantity of ingredients inside the pitcher. - Avoid blending extremely hot ingredients.

 If the blender still cannot work after the checks mentioned above, contact eufy Customer Support for maintenance.

Cleaning and Maintenance

-  - The blades are very sharp; use caution when cleaning pitcher.
- Do not immerse the motor base into water or any other liquids.

Clean the measuring cup, lid, pitcher, and blade assembly

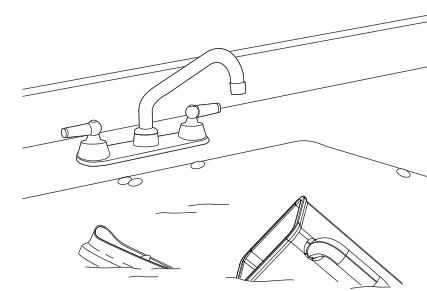


After each use:

1. Separate all parts from each other.
2. Select one of the three ways to clean the pitcher parts:
 - **Auto cleaning:** For best results, start cleaning immediately after use: 1) Pour 750ml warm water into the pitcher; 2) Add a few drops of dish soap; 3) Place the pitcher onto the motor base; 4) Turn the control knob to the ON position; 5) Press CLEAN to start. The auto-cleaning program will clean for 1 minute. If the pitcher is not completely cleaned, clean all parts of the pitcher with water.

- **Hand washing:** Use a mild dish soap and non-abrasive sponge to wash the measuring cup, lid, pitcher, and blade assembly in warm water. Rinse well and air-dry thoroughly. Reassemble before use.
- **Dishwasher:** Put the pitcher parts in the dishwasher to clean.

Note: When washing the blade assembly, use a dishwashing utensil with a handle to avoid direct hand contact with blades. Contact with the blade's edge can result in laceration. Rinse and air-dry thoroughly.

Clean the motor base

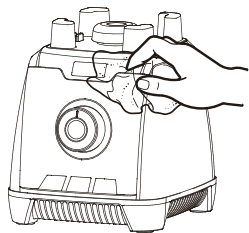

1. Unplug the power cord.
2. Wipe the motor base with a soft, damp cloth, and dry thoroughly.

Storage

After use, unplug the device. Store your blender upright with the pitcher assembled on the motor base, or beside it. Do not place anything on top. Keep the lid off to allow air circulation.

Specifications

Product Model	T6110
Input	AC 120 V, 60 Hz
Power Consumption	1200 W
Pitcher Capacity	50 oz (1.5 L)

Notice



This symbol on the device or its packaging indicates:
Do not dispose of electrical appliances as unsorted municipal waste; use separate collection facilities. Contact your local authority for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obliged to take back your old appliance for disposal at least free of charge.

Warranty

For consumers, who are covered by consumer protection laws or regulations in their country of purchase or, if different, their country of residence, the benefits conferred by eufy's Limited Warranty are in addition to all rights and remedies conveyed by such consumer protection laws and regulations, including but not limited to these additional rights.

1. For purchases made through eufy:

- Long Time Warranty For Quality-Related Issue

The 18-month Limited Warranty applies to purchases made from eufy. eufy warrants the owner that if this blender fails within 18 months from the date of purchase due to a defect in material or workmanship or as a result of normal wear and tear from ordinary household use, eufy will take care of all quality-related issues with a REPLACEMENT including any return shipping costs. Please note: any provided shipping labels must be used within 20 days.

2. For purchases made through other retailers:

Other retailers' after-sales support policies may vary. Please contact the retailer directly for specific details on their warranty process. Unauthorized reselling of eufy products is strictly prohibited.

3. What is not covered by the warranty:

- Purchases from unauthorized resellers.
- Any unit that has been used for commercial purposes or non-household applications.
- Inappropriate use or mishandling in accordance with the instructions, warnings and safeguards contained in the owner's manual. Abuse, misuse, negligent use, alteration of the Container or Container Component or Motor Base, exposure to abnormal or extreme conditions, or failure to follow the operating instructions, will void this Warranty.
- Consumable components/normal wear and tear of wearable parts like blending vessels, lids, blades and blender base which require regular maintenance and/or replacement to ensure the proper functioning of your blender.
- Cosmetic issues that do not affect performance, such as discoloration or the effects of the use of abrasives or cleaners or food build up.
- Purchases made over limited warranty time (unless otherwise stated).
- Non quality-related issues (after 30 days of purchase).
- Lost/stolen products or accidental damage.
- The cost of or damage caused by any unauthorized warranty repairs.
- Free products.

4. When does the warranty begin?

- The warranty begins the day you place your order.

5. What is a valid proof of purchase?

- An Amazon order number or eBay username for a purchase made through eufy.
- A dated sales receipt from an authorized eufy Reseller that shows a description of the product along with its price.

6. What if I don't have any proof of purchase?

- If you made your purchase through eufy, we may be able to locate your order using your email address, name or shipping address.

- If you made your purchase through an authorized eufy Reseller, you may contact the Reseller to see if they can provide a copy of your receipt.
- If the product was a gift, you may ask the giver to provide you with a copy of the receipt or claim the warranty on your behalf.

7. Will the warranty be renewed if my product is replaced?

- The warranty continues from the date of your original purchase and will not be renewed after a replacement has been provided.

8. What if I move overseas? Will my limited warranty still be valid?

- No, the warranty is only applicable in the country your product was originally shipped to.

Customer Service

-  18-month Limited Warranty
-  Lifetime Technical Support
-  support@eufylife.com
- 
 - (US) +1 (800) 988 7973 Mon-Fri 9:00 am - 5:00 pm (PT)
 - (UK) +44 (0) 1604 936200 Mon-Fri 6:00 - 11:00 (GMT)
 - (DE) +49 (0) 69 9579 7960 Mon-Fri 6:00 - 11:00
 - (日本) +81 03 4455 7823 月-金 9:00 - 17:00
 - (中国) +86 400 0550 036 周一至周五 9:00 - 17:30

 @EufyOfficial  @EufyOfficial  @EufyOfficial  @EufyOfficial

Anker Innovations Limited
Room 1318-19, Hollywood Plaza, 610 Nathan Road, Mongkok, Kowloon, Hong Kong