



Instruction Manual

Omni Air

Cordless UV Stick Vacuum



Contents

Before Starting..... 1

Use and Maintenance.. 3

Reference..... 5

● Please read this instruction manual before use. Use the Omni Air safely and correctly as described.
Keep this instruction manual for future reference.

Safety Precautions

Use basic precautions when using the product to prevent physical or monetary damages to the user or others, such as the warnings listed below.

⚠ WARNING: Failure to comply could result in death or serious injury.

Power (Failure to comply can result in fire or electric shock.)

- Do not use wet hands when plugging or unplugging the power adapter.
- Only use one plug in outlets with ratings of over 15 A and AC 100V. This could result in fire or electric shock.
- Do not use with other devices.
- Do not use loose outlets, damaged power adapters or charging cables.
- Do not plug the power adapter into power strips.
- Do not spray water on the power adapter or soak it in water.
- Do not damage the power adapter (such as by manipulation, excessive bending, pulling, twisting, pinching or placement under heavy objects).
- When unplugging the power adapter, pull it by the plug rather than the cord.
- Wipe dust off of the power adapter regularly.
- Unplug the power adapter from the outlet if the product will not be used for an extended time.
- Product isn't used while plugged in from the outlet, such as when moving, inspecting or doing maintenance on it.
- For a longer battery life, do not charge immediately after use. Wait a few minutes for the battery to cool down.

Maintenance

- Always turn the product off before cleaning the product.
- When cleaning the product, do not wet the device or use volatile substances such as benzene, thinners or alcohol.
- Do not use alkaline detergents, acidic industrial detergents, fragrance or acetic acid for the washable attachments.
- Keep the product in shade for long-term storage. Direct sunlight can cause deformation and discoloration.
- Do not wash the brush. It can cause discoloration or deformation.
- Clean the UV lamp regularly. UV transmittance may decline without proper cleaning.
- Replace the fabric filter and HEPA filter if the suction force consistently declines or if the device overheats.
- Only use accessories that are designed for this product to avoid poor performance, electric shock or damages.

Use

- Only use the product for the purposes described in the manual. Do not use the product for anything other than household uses (for example, do not turn the product over to force use of the UV lamp).
- This product should be used under the instructions or supervision of a person who can guarantee safe usage.
- If you experience a product defect or failure, stop using it immediately. Call the store of purchase or the Customer Support Center and ask for an inspection.
- Do not pick up anything that is burning or smoking, such as cigarettes or matches. This could damage the product or cause injury.
- Do not use the product during pest control fumigation (smoke-type). The chemicals could accumulate inside of the device and blow out of the outtake port and be harmful to your health. After fumigation, ventilate the space well before using the device.
- Do not touch the UV lamp during or immediately after use to avoid burns.


Use

- Do not expose the eyes of the user or an animal to the light from the UV lamp (ultraviolet rays). Direct exposure of the eyes or skin to ultraviolet light could cause eye and skin damage. Consult a doctor if you have any concerns.
- Do not vacuum thumb tacks, sharp objects or liquids. This could result in electric shock or the product breaking.
- Keep the intake port and vacuum brush far from your whole body, including your hair, clothes, fingers or eyes to avoid injury or damage to the product.
- Do not modify, disassemble or repair the product to avoid injury, fire or electric shock, etc.
- Do not disassemble the battery or power adapter.
- Do not apply heat to the battery or put it in flames.
- The battery is designed exclusively for this product and cannot be used with other home appliances or for other uses.
- Removing the battery while the device is on may cause it to break.
- If the battery leaks, be careful not to let it contact your skin or eyes.
- Do not jolt the battery.
- To protect the motor and battery, the product may not work at temperatures below 41°F or above 113°F.
- When attaching the battery to the device, check its orientation and secure it firmly until you hear a click.
- Be careful not to drop the battery when removing or placing it. This could damage the product or cause injury.
- Do not drop or recline the product. This could damage the product or cause injury.
- Do not step or lean on the product. This could damage the product or cause injury.
- Carry the product by its handle. Not doing so could damage the product or cause injury.
- Only use attachments (such as the battery and power adapter) designed specifically for the product.
- This product is intended for indoor use. Do not use it in direct sunlight or where it can get wet from rain. This could damage the product or cause discoloration.
- Do not pick up large amounts of fine dust, such as flour. This could damage the product.
- Do not kick the product. This could damage the product.
- For extended durations of nonuse, unplug the power adapter, remove the battery from the charging cable, and put it aside.
- The battery will automatically discharge when it is not being charged. Charge the battery before storing it.
- Storing the battery with a low charge for long periods of time will cause its performance to decline.

References and precautions



- Turn the power off immediately if there is smoke or an unusual sound or smell coming from the device or battery. Call the Customer Support Center (866-872-9267).
- This product uses a lithium ion battery. These batteries are valuable resources that can be recycled after use. Please do not discard them, and inquire with your municipality about how to recycle them.
※ Rules of collection may differ by municipality.

■ Assembly

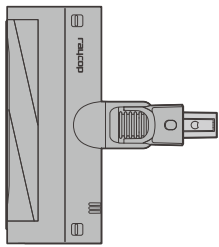

Power Motor Head

CLICK

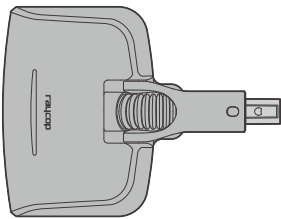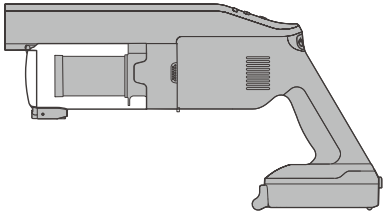


UV Sanitizing Head

CLICK



CLICK



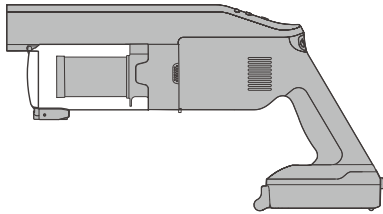


Pulsating Brush (for UV Sanitizing Head)

■ Dust Box Set



 
Brush Attachment Nozzle Attachment

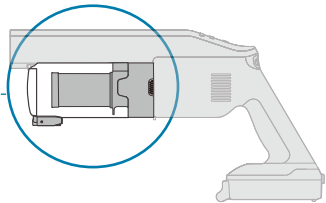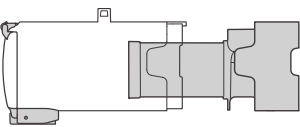


■ Charging Adaptor



Crevice Tool


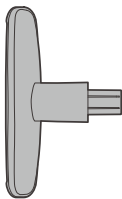


Upholstery Tool

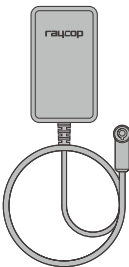


3 Use and Maintenance

1 Battery attaching and removing

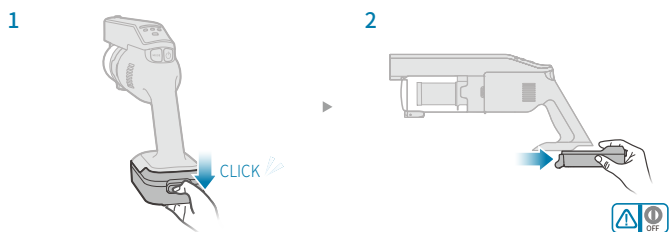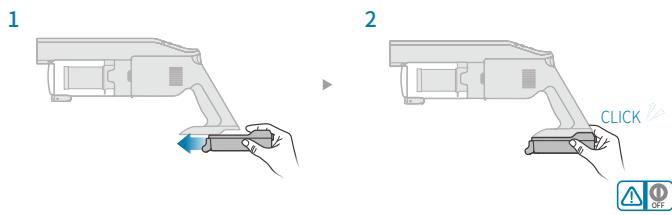


2 Operating Modes

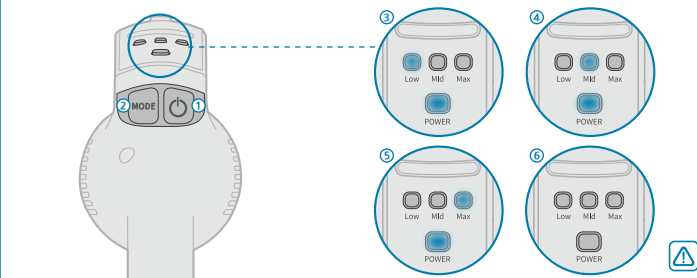


① Power Button, ② Mode Button, [Mode : ③ Low , ④ Mid , ⑤ Max] ⑥ Stop

4 Checking battery charge and state of charge

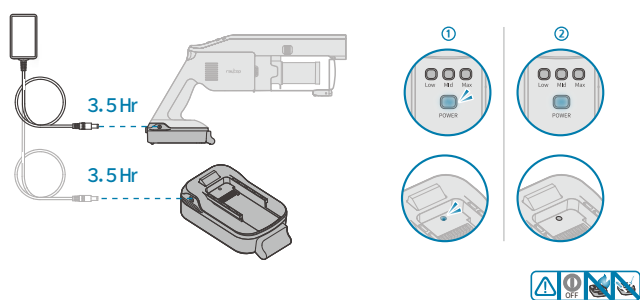

The battery can be charged separately / ① Charging (body: red light, batt: red light), ② Fully charged (body: green light, batt: no light)

5 Checking for blockages

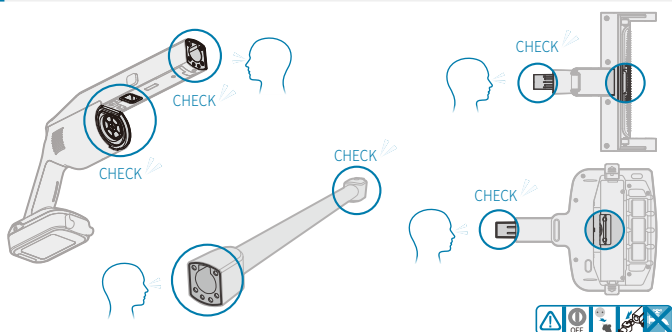


In Max mode, the device will stop automatically if there is blockage with the head or device. (warranty does not cover damages caused by blockages by foreign objects).

3 Using the UV Sanitizing Head for each cleaning object


Pulsating Brush

For mattress, upholstery surface etc.

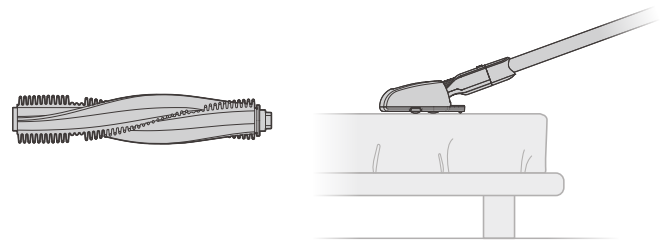


Floor Brush

Used for the floors such as carpet, floor and marble etc.

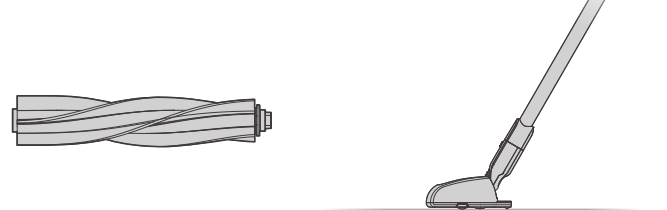


UV head will scuff waxed flooring.

Replace the brush

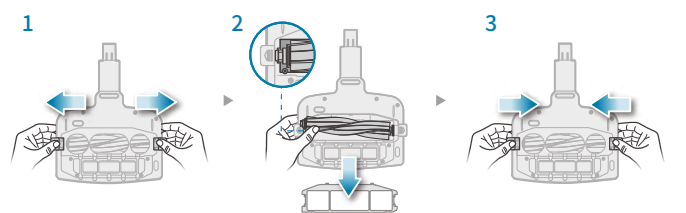


6 Removing and cleaning the dust box

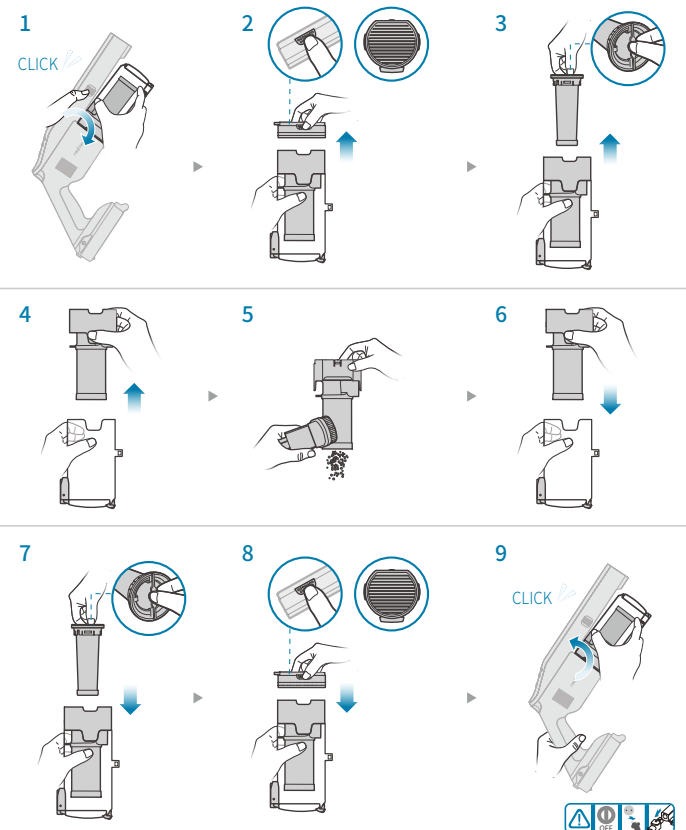


After use, be sure to clean the dust box for proper use next time.

7 Washing the dust box

Dust box

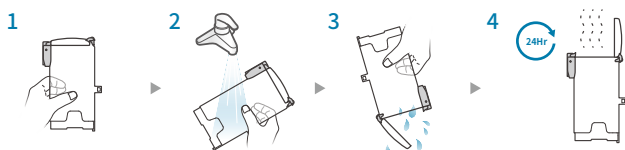

Metal filter

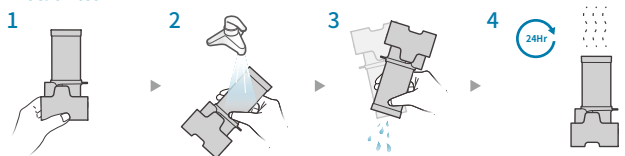

Fabric filter






HEPA filter






Wash at least once a month. Make sure the dust box and all filters are completely dry before use.

8 Cleaning the Power Motor Head

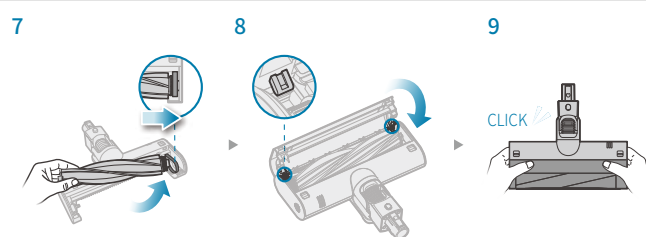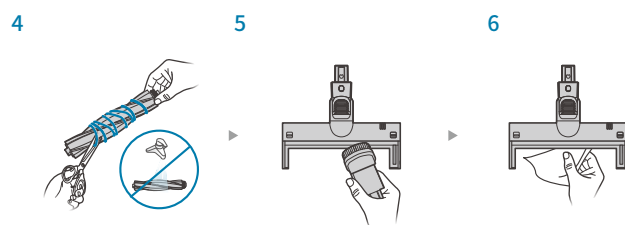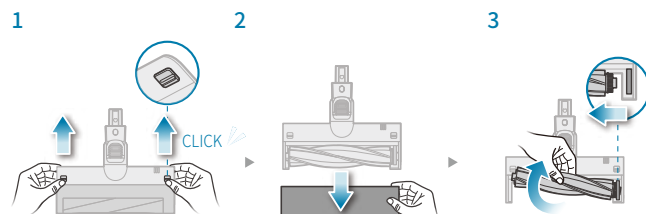

Blockages on the brush will decrease its performance. Clean it regularly (do not wash the brush).


9 Cleaning the UV Sanitizing Head (brush)

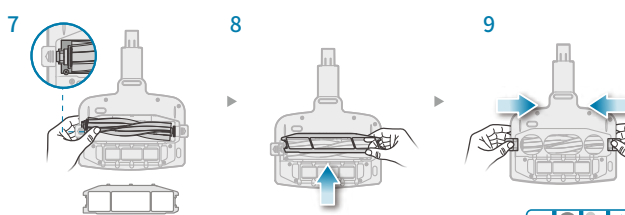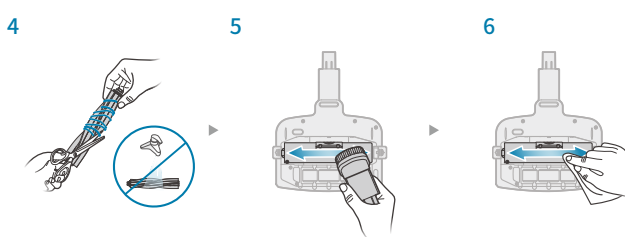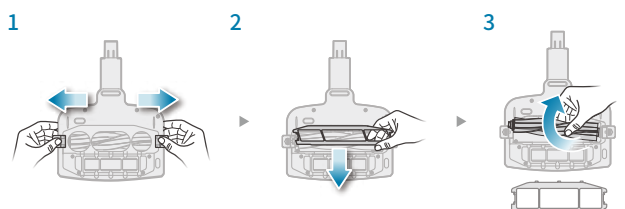

CAUTION: For serious adsorption bedding such as bed linen and down comforters, use low / mid mode for smooth cleaning.

Blockages on the brush will decrease its performance. Clean it regularly (do not wash the brush).

10 Cleaning the UV Sanitizing Head (lamp)

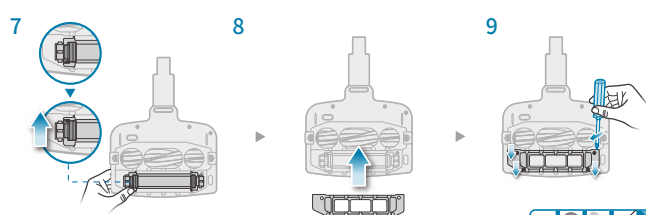

CAUTION: For serious adsorption bedding such as bed linen and down comforters, use low / mid mode for smooth cleaning.

The silver ball in the UV lamp is needed to light the UV lamp. The sound of the ball rolling does not indicate a malfunction of the product.

Reference

Operation

The device will start by pressing the power button.
You can change modes with the mode button.
The device will stop by pressing the power button.
The heads and brush will turn on automatically when the power button is pressed.

Do not touch the brush while the device is on.

Do not use for any purpose other than cleaning.

Do not touch the UV lamp during or immediately after use.

It may cause skin burn.

Do not shine the UV lamp (UV ray) directly at the eyes of people and pets.

Do not push the heads hard and hit it against a wall or drop it, which could damage the heads and UV lamp or scratch your floor.

Proper use of the UV Sanitizing Head on bedding

The Low Mode is recommended.


Try vacuuming at least once a week.

Slowly vacuum horizontally from end to end.

Carefully vacuum areas that directly contact the skin and other areas of concern.

Press the UV Sanitizing Head firmly against the bedding and slide it slowly.

The act of pressing and pulling produce the same results, so move it forward and back slowly.

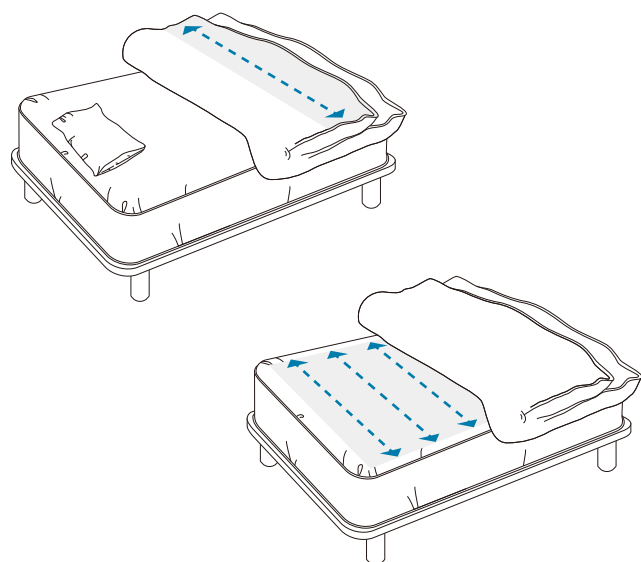

Emptying the dust box

Turn the cover of the dust box downward and press the cover button.

Discard the contents of the dust box and close the cover.

Empty the dust box before the MAX indicator line is reached.

Do not turn the device on while the dust box's cover is open.

Checking for blockage

If there is a sudden decrease in the suction force or there are unusual sounds coming from the product, follow the instructions in #5 on page 3 to check for blockages.

Exhaust does not escape the discharge port when the intake port is clogged.

Check to see if exhaust air is coming out of the exhaust port.

Unplug the product from the power adapter to avoid burn or injuries.

Do not press the power button while the power adapter is plugged in.

Do not turn the product on while you are looking for blockages.

Be careful of sharp objects when removing blockages.

The warranty does not cover product failures that are caused by foreign objects.

In MAX mode, the device will stop automatically if there is a blockage at the heads of the device.

Remove the blockage before restarting it.

1. Remove the dust box set and check the device's attachment area.
2. Examine the inside of the extension pipe.
3. Remove the brush from the heads and examine it.

Washable parts

The dust box, metal filter, fabric filter and HEPA filter,

and HEPA filter case are washable and should be cleaned regularly.

Use the following guidelines.

Cleaning the dust box set

Wash the filter at least once a month.

Remove any dust or dirt on the filter after every use.

Always clean the dust box set after use.

Check the filters according to the guidelines and wash it to sustain its performance.

Washing the metal filter

If the filter breaks or has an odor, visit the Raycop official website or call the Customer Support Center (866-872-9267) to purchase a genuine product for replacement.

1. Use something like a toothbrush to clean dust or dirt off of the metal filter.
2. Wash the metal filter.
Shake off any excess water and keep in a well-ventilated and shaded area until it is completely dry (for at least 24 hours).

Washing the fabric filter and HEPA filter

If the filter breaks or has an odor, visit the Raycop official website or call the Customer Support Center (866-872-9267) to purchase a genuine product for replacement.

1. Remove any dust and dirt off of the fabric filter and HEPA filter.
2. Wash the fabric filter and HEPA filter.
Shake off any excess water and keep in a well-ventilated and sunny area until it is completely dry (for at least 24 hours).

Cleaning the heads

Debris on the brush will decrease the product's performance so clean it regularly.

When the brushes are worn or damaged, replace them with a new brush. Turning the product on without securing the brush to the Heads could cause injuries or damages.

Do not wash the brush and UV lamp.

The silver ball in the UV lamp is needed to light the UV lamp and the sound of the ball rolling does not indicate a malfunction of the product. Be careful not to break the UV lamp when cleaning it, this may cause an injury.

Attaching and removing the battery

Secure the battery to the product until you hear a click sound.
Before removing the battery, turn the power off and remove the power adapter.

Charging the battery

The battery can be charged separately.
Charge it on a flat surface or a stable location.
Plug the power adapter into the battery plug and see if the charging light turns on.
The power lamp will blink a green light when the battery is low during use.

Leaning

The product can be leaned against a table or chair with the Power Motor Head placed on a flat floor.
Put the product on a flat surface after turning it off.
Make sure there are no fragile objects nearby before leaning the device against something.
To prevent the product from falling over, do not place it on carpet, cushion mats, a soft floor, an uneven or slanted floor, or a surface that is not flat.

Do not use this product in any of the following locations:

Somewhere unsteady.
Around heating devices.
A place where oil or flammable gas is present or may be spilled.
A place where there may be pet urine or feces.
Around lit cigarettes or flammable substances.
Hot and humid places or somewhere the product could get wet (i.e., near a bath tub).
Somewhere close to where there are sprays, gasoline or thinners.
Somewhere reachable by infants or children.
Somewhere there is corrosive gas or scrap metal.

Warranty Terms

Customer Support Center

Thank you for your purchase of a Raycop product.
This product has gone through our stringent quality control process and inspections before being shipped. In the unlikely event that the product malfunctions during normal use due to manufacturing reasons, the product will be repaired at no cost for up to two years.
To make inquiries about the product, check your serial number and call the Customer Support Center (866-872-9267) for a quicker response.
The product's serial number is on the back of the dust box.
Free repairs will be provided for applicable defects during the warranty period.

Online registration

Registering as a user will allow us to serve you more quickly and efficiently.
Please register by email or by calling the Customer Support Center.

Scope of quality assurance

If there is a product defect due to defective parts, functions or workmanship, the product may be repaired or replaced for two years after the purchase or delivery of the product, at Raycop's discretion. This warranty is only valid if the product is used in the country where it was purchased.

Warranty details

The manufacturer's warranty is valid from the date of purchase or delivery. All replaced parts will become Raycop's property.
The warranty period will not be extended upon the repair or replacement of the warranty product.
The warranty is considered a supplemental service and does not affect your legal rights as a consumer.

Exclusions for Warranty

Damages or defects caused by careless handling, neglect, misuse, or a lack of maintenance of the product not in accordance with the manual.
Use of the product other than for normal domestic purposes.
Assembly or installation of parts not in accordance with the manual.
Use of parts or consumables other than those produced by Raycop.
Improper installation or unauthorized repairs or modifications of the product.
Normal wear and damages to the fuse and brush.
Blockage (see the manual for how to clean blockage).
Use of the product over rocks, ash or plaster.
Reduction to battery discharge time due to battery age or use.
Visit the Raycop official website or contact the Customer Support Center with any questions you may have about the scope of warranty (866-872-9267).

Protection of personal information

By providing your personal information to register for the warranty, you consent to Raycop's use of your information.
Raycop may use your information for marketing and research purposes (including promotional emails).
To provide desirable services to our customers, your information may be given to a third party, a business partner or a specialized consulting company.
Please visit the Raycop official website or contact the Customer Support Center (866-872-9267) if you would like to see Raycop's standards for the protection of personal information.

Official Website : www.raycop.com

Email : support@raycop.com

Customer Support Center : 866-872-9267

COMMITMENT TO QUALITY

Technical Specifications

Serial Number |

Warranty Period |

2 years from the date of purchase (parts and additional products are not included)

Size |

8.2 X 44.9 X 8.3 in (207.4 x 1139.5 x 210.8 mm)

Weight |

Approximately 3.74 lbs (1.7 kg)

Power Consumption |

Input 100–240V-50/60Hz 0.4A
Output  18V 0.5A

UV-C Lamp |

4 W

UV Light Safety Mechanism |

Two Built in Sensors for Surface Detection

Battery |

14.4V, 2000mAh

Power Consumption |

150 W

Suction Mode |

3 Modes (LOW / MID / MAX)

Charging Time |

3.5 hours

Run Time |

Approximately LOW: 38min / MID: 20min / MAX: 9min

RAYCOP North America Inc.

support@raycop.com

12667 Alcosta Boulevard,

San Ramon, CA 94583

866.872.9267

www.raycop.com

For Warranty Repairs, please visit our website at www.raycop.com for details.

