





原声蓝牙插卡音箱

Acoustic Bluetooth Speaker

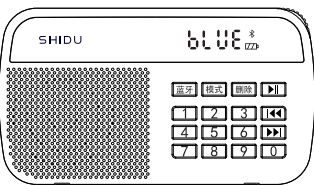


Operation Manual 使用说明书

主要功能说明:

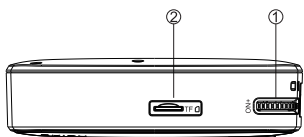

① **电源开关/音量调节:** 将拨轮开关拨至“ON”方向, 当听到“咔”的一声, 同时显示屏幕点亮, 表示已经开机; 同时拨动到“ON”方向为音量加, 拨至“OFF”方向为音量减; 将拨轮开关拨至“OFF”位置, 当听到“咔”的一声, 显示屏熄灭表示机器关机。

② **TF卡:** 按照主机标识的方向将TF卡正确插入主机TF卡盘槽后, 主机将自动播放TF卡中的音乐文件, 同时可通过操作“◀”、“▶”键或者数字选曲键选择自己喜欢的曲目。

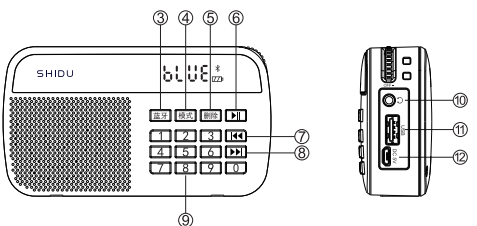

③ 一键蓝牙

④ **模式切换:** 在插入U盘、TF卡时可短按“模式”键来对U盘/TF卡/蓝牙/收音模式/电量显示之间的切换。

⑤ **音乐删除:** 在音乐模式下长按此键是删除音乐。

⑥ **播放/暂停:** 在音乐模式下短按“▶”键为暂停, 再次短按为播放。

⑦ **上一曲:** 长按“◀”为快退, 短按为上一曲。

⑧ **下一曲:** 长按“▶”为快进, 短按为下一曲。

⑨ **智能数字点歌 (选台):** 在TF卡模式、U盘模式、FM模式点击数字键, 可直接选择您想要点播的曲目, 有效的提升了曲目选择的便捷性。


⑩ **耳机输出:** 可选择耳机输出模式, 公共场所免打扰听音乐。

⑪ **USB接口:** 按照主机标识的方向将U盘正确插入主机 U 盘槽后, 主机将自动播放U盘中的音乐文件, 同时可通过操作“◀”、“▶”键或者数字选曲键选择自己喜欢的曲目。

⑫ DC 5V 充电口

FM收音:

○ 在开机状态下, 短按“模式”键调整至FM收音模式, 屏幕显示FM电台频率; 再长按“▶”键进入自动搜台模式; 自动搜台完成后, 主机自动保存搜索到的广播频道。可通过短按“◀”或是“▶”键选择储存的播放频道。

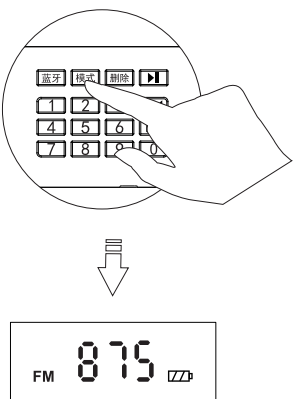


无线蓝牙操作说明:

第一步: 开机短按“蓝牙”键进入蓝牙模式, 屏幕显示“bLUE”蓝牙图标“*”不停闪烁。


第二步: 打开手机, 进入手机的“设置”菜单, 找到蓝牙功能选项, 打开手机的蓝牙功能, 点“扫描”按钮, 待搜索到“S159”点击“S159”连接即可; 主机会显示“bLUE”蓝牙图标“*”停止闪烁。

第三步: 连接成功后, 即可通过主机播放手机教学教材, 培训资料, 歌曲播放等。

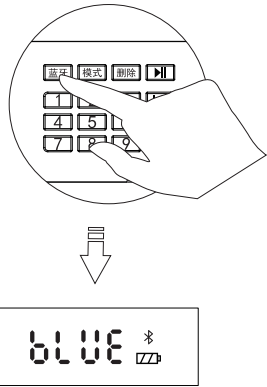

充电:

○ 当主机低电时, 将随机标配的USB充电线连接主机DC 5V插口, 另一端连接5V电源适配器再接取电源 (220V) 插座充电。充电时屏幕电池图标将会不停闪烁。充满电后, 电池图标长亮。

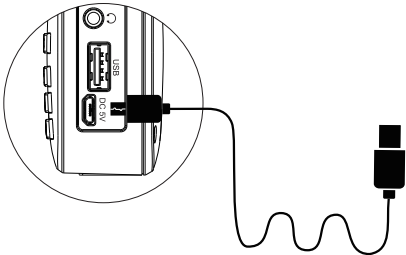

注意:

a. 在工作时, 屏幕电池图标不停的闪烁, 表示电力不足, 请及时充电; 本机充电时间约3-5小时充满;

b. 第一次使用主机时, 电池有小部份电量, 但是为了达到最好的效果, 建议先充满电再使用;

c. 本机标配只含充电线, 可适用各类手机充电头为本机充电, 充电后可通过拔掉电源适配器插头断开电网电源。

注: 本机自带充电线, 消费者若使用电源适配器充电, 则应购买配套使用获得CCC认证并满足标准要求电源适配器为本机充电。

双机TWS蓝牙互连功能:

第一步: 将两台主机同时切换到蓝牙模式, 长按其中的一台主机“模式”键进入等待状态, 连接成功后另一台主机显示“bLUE”, 蓝牙图标“*”停止闪烁, 表示两台主机蓝牙相互串联成功。

第二步: 手机连接蓝牙功能, 进入手机“设置”菜单, 找到蓝牙功能选项, 打开手机蓝牙功能, 点击手机“扫描”按钮, 待搜索到“S159”, 点击“S159”连接即可实现双机蓝牙同步播放, 带给您音乐现场氛围的环境立体音效。

主机技术参数:

输出功率	≤5W	频率响应	≤150Hz-18KHz
喇叭阻抗	4Ω	工作温度	-10℃-45℃
充电电压	DC 5V =1A 或 2A	充电时间	3-5 小时
使用音乐时间	5-7 小时 (中等音量)	蓝牙版本	5.0+DER

常见问题的解答:

故障	解决方法
多次连接配对不成功	1. 关闭音箱重新开机 2. 如果您的设备需要通行码, 请输入 0000
音乐播放出现断音	1. 连接设备是否超出有效连接距离, 或音源同连接设备之间有障碍物
TF 卡出错、格式错误	1. 检查 TF 卡格式 是否正确 (音箱支持 TF 卡格式为 FAT32) 2.TF 卡内文件量是否为 WAV、MP3
播放时无声	1. 检查音箱音量是否有调节

安全警告:

1. 请勿将产品及配件靠近热源或任何过热的环境中。
2. 请勿将产品及配件接触水及湿气, 不要在靠近水的地方使用本设备, 也不要将产品浸入任何液体中, 避免产品及配件受到水滴或水溅。
3. 请勿自行打开或任意拆解、维修电池组件, 如果电池更换不当会有爆炸危险, 严禁将电池投入水、火中或靠近任何过热的环境中。
4. 本产品由外接电源适配器 (5V =1A 或 2A 电源) 充电后使用, 充电后可方便的通过拔掉电源适配器插头断开电网电源, 充电时请将产品放置于空旷区域充电, 远离易燃物品, 请勿边充电边使用。
5. 本机自带充电线, 消费者若使用电源适配器充电, 则应购买配套使用获得CCC认证并满足标准要求的电源适配器为本机充电。
6. 当用户暂不使用本产品时, 请将产品 “ 电源开关 ” 关闭 (参见产品操控示意图), 避免电池电量的流失。
7. 当禁止使用无线设备或设备的使用会引起电子设备的干扰与安全隐患时, 请关闭本产品。
8. 在易燃易爆区域, 请关闭本产品, 并遵守相关标示说明, 以免引起爆炸或火灾。易燃易爆区域包括但不限于: 加油站、易燃或化工制品运输及储存设施、有爆炸危险标志的区域, 有 “ 关掉双向无线电设备 ” 标志的区域。
9. 乘坐飞机时, 请遵守航空公司有关规定和条例, 在飞机起飞前关闭本产品, 以免造成安全隐患。

二、关于售后服务的说明:

1. 购机日期以本凭证为准, 不能有效证明的, 以生产日期为准。
2. 质量问题不包括用户个人对音质、音色等主观异议。
3. 配件、外壳、说明书、包装不在保修服务范围内。
4. 对已停产型号产品的服务, 本公司仅做功能性修复 (外观可能与原产品有异)
5. 经销商向您做出的非本公司保证的其它承诺, 本公司不承担任何责任。
6. 用户在接受服务之前请将重要资料另行备份或记录, 因维修或其他原因造成的任何损失, 本公司概不负责。因保管不善等原因将机内资料泄露给第三者所造成的损失 (如: 银行账号、密码、资料被更改等), 本公司也概不负责。
7. 在免费保修期内, 本公司或授权服务机构拥有更换后的故障件的所有权及处置权。
8. 使用本产品前, 请仔细阅读本产品的使用说明书, 并妥善保管购机凭证。本三包凭证内容解释权归属深圳市十度数码科技有限公司所有, 如有变动, 恕不另行通知。

客服服务时间: 每周一至周五 9: 00 -18: 00 (法定节假日除外)
全国统一服务热线: 4008 939 488 公司网址: www.10shidu.com

注意:

本手册描述的产品及其附件的某些特征和功能, 仅供参考。
十度数码科技保留随时修改本手册中任何信息的权利, 无需进行任何提前通知且不承担任何责任。

无担保声明:

本手册中的内容, 除非适用法律要求, 十度数码科技对本手册中的所有内容不提供任何明示或暗示的保证。
在法律允许的范围内, 十度数码科技在任何情况下, 都不对因使用本手册相关内容而产生的任何特殊的、附带的、间接的、继发性的损害进行赔偿, 也不对任何利润、数据、商誉或可预期的损失进行赔偿。

进出品管制:

若需将此产品手册中描述的产品出口、再出口、或者进口, 您应遵守适用的进出口管制法律法规。


深圳市十度数码科技有限公司
Shenzhen SHIDU Digital Technology Co.,Ltd
地址: 深圳市宝安区西乡三围航安路兆丰工业园六楼
电话: 0755-22165866 传真: 0755-29105099 网址: www.10shidu.com
本证件所有产品图片及文字的内容已经详细核对, 如出现印刷错漏, 本公司不承担任何此产生的后果, 产品图片及详细内容参数数量以实物为准。
SHIDU十度商标及LOGO均已注册, 受知识产权保护, 未经授权允许不得冒用, 违者必究。本公司保留对产品更正改动的权利, 届时恕不另行通知, 在法律允许范围内, 最终解释权归深圳市十度数码科技有限公司所有。

产品保修卡

购买本产品时, 请认真填写此卡, 并予以妥善保存。


产品型号:	
购买日期:	
用户名:	
用户地址:	
联系电话:	
经销单位:	
地址:	
负责人:	
联系电话:	
签章:	

Function Illustration:

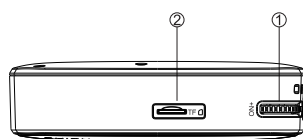

1.Power/Volume: Rotate the knob to “on” till the screen light up to start the Bluetooth Speaker. During start-up status, rotate the knob clockwise to “+” to continuously increase the volume; rotate the knob to “-” to decrease the volume. Rotate the knob to “off” to turn off the device.

2.TF card: After inserted the TF card into the TF card slot according to the direction of the speaker identification, the speaker will automatically play the music file of TF card, and the previous song and the next song can be selected by press the “◀”/“▶” button.

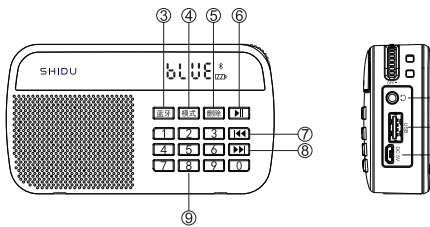

3.Bluetooth Key

4.Mode: After insert TF card/USB flash drive, short press this key to select USB Flash drive mode, TF card mode, Bluetooth mode, FM mode, battery showing mode.

5.Music delete: In music playing mode, long press this key to delete music.

6.Play/Pause: Short press “▶” to pause, and press again to play the music.

7.Previous: Short press “◀” to the previous music, long press for fast backward.

8.Next: Short press “▶” to the next music, long press for fast forward.

9.Intelligent Music Selection Number Key: Press the Number Key in TF card playing, USB flash drive playing and FM mode to directly enter the song and channel you want. It will be greatly improve the convenience of selection operation.


10.Earphone slot

11.USB slot: After inserted USB flash drive into the USB flash drive slot according to the direction of the speaker identification, the speaker will automatically play the music file of USB flash drive, and the previous song and the next song can be selected by press the “◀”/“▶” button.

12.DC 5V charging Port

FM Function:

Switch on the speaker, short press “M” to choose the FM mode with the screen showing radio frequency; Long press “▶” to enter into automatic channels searching, after searched successfully, the device will save the channel automatically. Please press “◀” or “▶” to choose the saved channels.

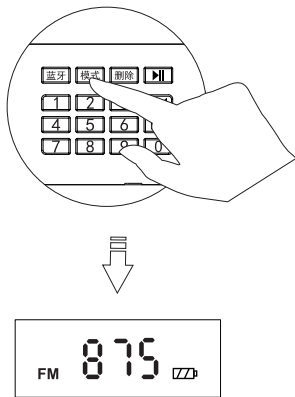


Wireless Bluetooth:

Step 1: Switch on the Bluetooth Speaker and short press “Bluetooth key” to enter into Bluetooth mode, and the led display show “bLUE*”, and “bLUE” on the screen keep flashing.

Step 2: Enter into “Settings” of mobile and turn on Bluetooth function. Then please search S159 and connect. The bluetooth is connected successfully with the “bLUE” icon stops flashing.

After successfully paired, the Bluetooth Speaker can play teaching materials, training materials, songs from the mobile phone. You can make hands-free call by built-in microphone.

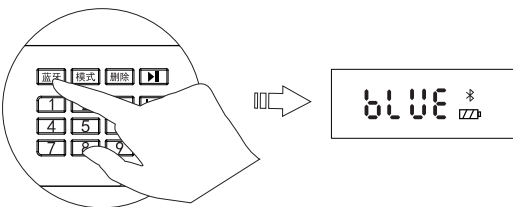


True Wireless Stereo(TWS):

Step 1: Switch on the two devices and switch to Bluetooth mode, long press one of the “Mode” key to enter in the status of waiting for connection. When “bLUE” icon of another speaker stops flashing, which means these 2 speakers connected successfully.

Step 2: Enter into the “Setting” of Mobile and turn on Bluetooth function. Then please search S159 and connect.

Step 3: Long press “Mode” key of them and quit out the TWS function.

About Charging:

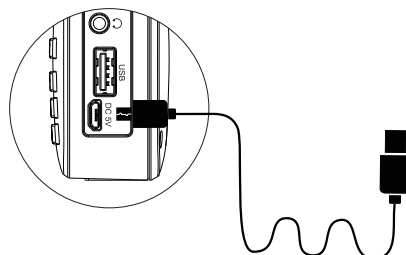

A. When working, the battery icon on the screen flashes continuously, indicating that the battery is low, please charge it in time. Please power off speaker when charge, please use the standard charging cable, the other end connects with the power supply AC 110~240V to charge. When charging, the battery icon on the screen will flash continuously. When fully charged, the battery icon will stop flashing. Please unplug the adapter timely after fully charged, the charging time is normally 3-5 hours.

B. In order to achieve the best effect when using the speaker for the first time, it is recommended to be fully charged before use.

C. Standard package just include the charging cable, the cable apply to normal phone adapter, please unplug adapter when fully charged.

Specification:

Max output power:	≤5W	Frequency response:	150Hz-18KHz
Output Impedance:	4Ω	Work temperature:	-10℃-45℃
Charging voltage:	DC 5V 1A-2A	Charging time:	3-5 hours
Music-play time:	5-7 hours (medium volume)	Bluetooth Version:	5.0+DER

Trouble shooting:

1.The bluetooth can not be connected

1.Restart the Bluetooth speaker
2.If your device demand access, please type 0000

2.A break in music playing

Check if the connecting device in valid range, or if there is obstacle between Bluetooth speaker and connected device.

3.TF card go wrong or format error

1.Check the format of TF card (S159 support TF card in FAT 32 format)
2.Check to confirm the files in TF card in WAV, MP3 format

4.No sound

Adjust the volume of Bluetooth speaker

SHIDU Guarantee:

100% SHIDU Guaranteed Product Satisfaction.
We promise 1 year warranty.
If you have any questions, please feel free to contact us, we will try our best to provide you the best service.
www.10shidu.com Email: info@10shidu.com