

STEP 1: switch on the glasses by tapping 5 seconds on touch area on the right arm.




STEP 2: turn on your Bluetooth on your mobile phone Setting

STEP 3: search “eyewear pro” and tap to connect it

For ALEXA voice command, please continue

STEP 4: download application name “native voice” through app store or google play

STEP 5: open “native voice” to set up voice command by login your amazon account on “Assistants” manual

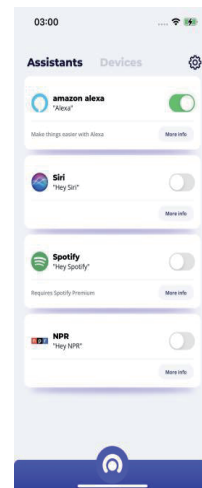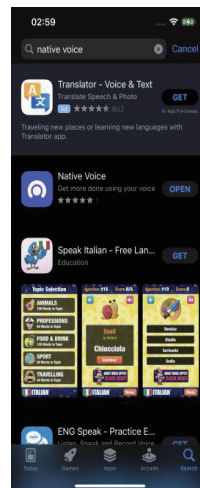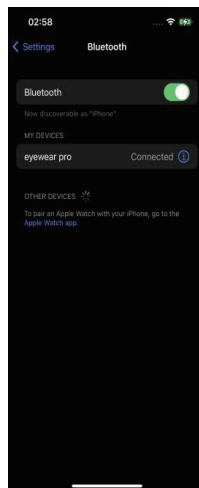

STEP 6: Native Voice will help you to add the device step by step, or you can do it by yourself by adding Bluetooth device on “Devices” manual of the application

STEP 7: tap touch area for 2 seconds you will hear “Dong”, then call your voice assistance, for example ALEXA/google/Siri/Spotify. By hearing a ringtone, you can start to speak out your final command, for example, “turn off the TV”/“buy me tissue”

