

Stack Guide


Insulating Honeycomb Shades & Wood Blinds

Use these stacking guidelines if you plan on installing your insulating honeycomb shade in a place where you need to raise the entire shade above an obstacle (such as above doors that open). These guidelines will help you determine how high to mount your shade, so that the shade will clear the obstacle when it's fully raised.

IMPORTANT:

The stack height values shown below are estimates. Due to natural variation in fabrics, actual stack heights may vary from shade to shade. Lutron recommends allowing for an additional 1 in (25 mm) of stack height to account for natural fabric variations.

Insulating honeycomb shades are not intended for pocket installations.

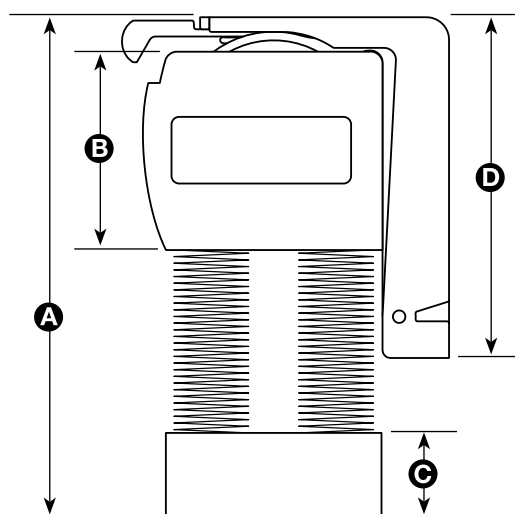

A = Stack height:
the total height of the fully raised shade from the top of the bracket to the bottom of the bottom rail

B = 1 5/8 in. (42 mm)
headrail height

C = 5/8 in. (16 mm)
bottom rail height

D = 2 5/8 in. (67 mm)
bracket height

Shade Height	Stack Height A					
	Cyprus		Monaco and Rio			Napa
	Light-Filtering	Room-Darkening	Light-Filtering	Room-Darkening	Double-Cell	Light-Filtering
12 in (305 mm)	2 3/4 in (70mm)	2 5/8 in (67 mm)	2 3/4 in (70mm)	2 7/8 in (74 mm)	3 1/8 in (80mm)	2 7/8 in (74mm)
24 in (610 mm)	2 7/8 in (74mm)	2 7/8 in (74 mm)	3 in (77 mm)	3 1/8 in (80mm)	3 1/2 in (89mm)	3 1/4 in (83mm)
36 in (914 mm)	3 1/8 in (80mm)	3 in (77 mm)	3 3/8 in (86mm)	3 1/4 in (83 mm)	3 7/8 in (99mm)	3 5/8 in (93mm)
48 in (1219 mm)	3 3/8 in (86mm)	3 1/4 in (83 mm)	3 5/8 in (93mm)	3 1/2 in (89mm)	4 1/8 in (105mm)	4 1/8 in (105mm)
60 in (1524 mm)	3 1/2 in (89mm)	3 3/8 in (86mm)	3 7/8 in (99mm)	3 3/4 in (96 mm)	4 1/2 in (115mm)	4 3/8 in (111 mm)
72 in (1829 mm)	3 3/4 in (96mm)	3 1/2 in (89mm)	4 in (102 mm)	4 in (102 mm)	4 7/8 in (124mm)	4 3/4 in (96mm)
84 in (2134 mm)	3 7/8 in (99mm)	3 3/4 in (96mm)	4 1/4 in (108mm)	4 1/4 in (108mm)	5 1/4 in (134mm)	5 1/8 in (131 mm)
96 in (2438 mm)	4 1/8 in (105mm)	3 7/8 in (99mm)	4 5/8 in (118mm)	4 1/2 in (115mm)	5 5/8 in (143mm)	5 1/2 in (140mm)
104 in (2642 mm)	4 1/4 in (108mm)	4 1/4 in (108mm)	4 3/4 in (121 mm)	4 5/8 in (117 mm)	5 7/8 in (149mm)	5 3/4 in (146mm)

Stack Guide

Insulating Honeycomb Shades & Wood Blinds

Use these stacking guidelines if you plan on installing your wood blind in a place where you need to raise the entire blind above an obstacle (such as above doors that open). These guidelines will help you determine how high to mount your blind, so that the blind will clear the obstacle when it's fully raised.

IMPORTANT:

The stack height values shown below are estimates. Due to natural variation in basswood, actual stack heights may vary from blind to blind.


Wood blinds are not intended for pocket installations.

A = Stack height:
the total height of the fully raised blind from the top of the bracket to the bottom of the bottom rail

B = 3 in. (76mm)
valance height

C = 2 ½ in. (62mm)
bracket height

D = ⅝ in. (16 mm)
bottom bar height

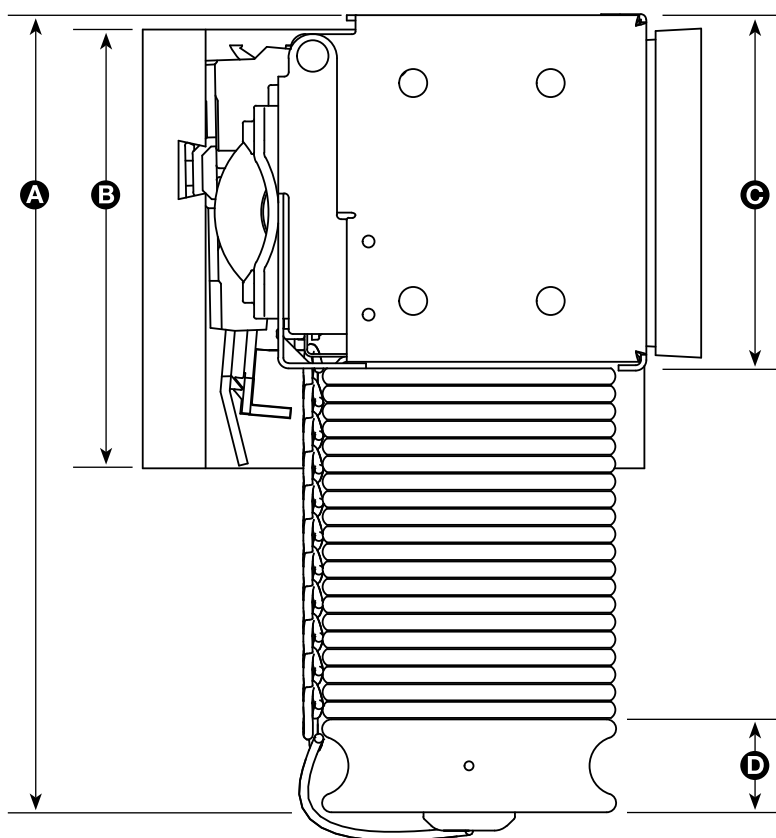

Specified Blind Height	Estimated Stack Height A
12 in (305 mm)	3 ⅞ in (99mm)
24 in (610 mm)	4 ¾ in (121 mm)
36 in (914 mm)	5 ⅝ in (143mm)
48 in (1219 mm)	6 ½ in (165mm)
60 in (1524 mm)	7 ⅜ in (187mm)
72 in (1829 mm)	8 ¼ in (210mm)